

100SD/134F/138F/2610F Sliding Door Instructions:

Minimum Door Thickness 1" (25mm) Soft Close <u>or</u> Soft Open only, Minimum Door Width 18" (457mm). Soft Close <u>and</u> Soft Open, Minimum Door Width is 24" (610mm).

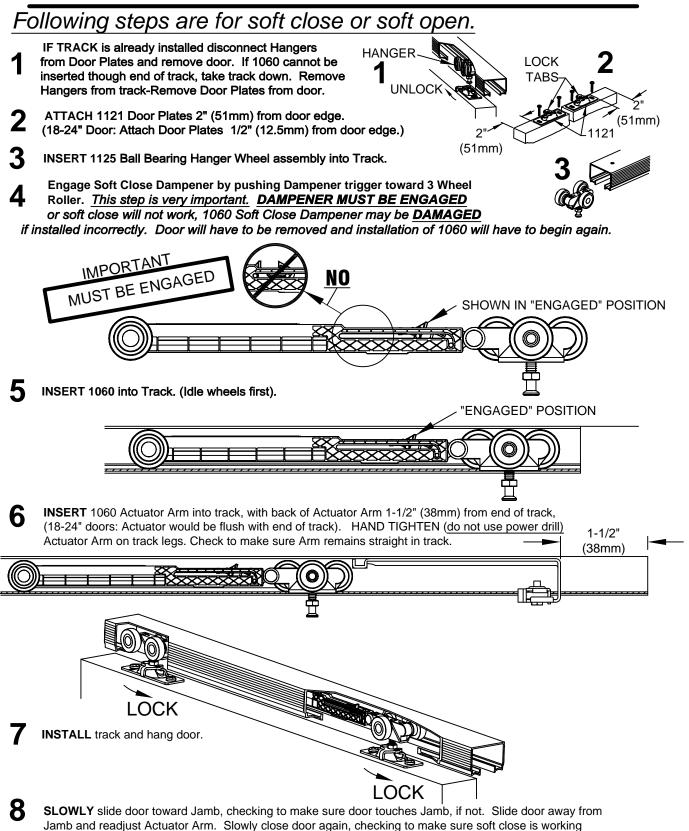

Jamb and readjust Actuator Arm. Slowly close door again, checking properly. Once confirmed, begin using door normally.

Following steps are for soft close and open.

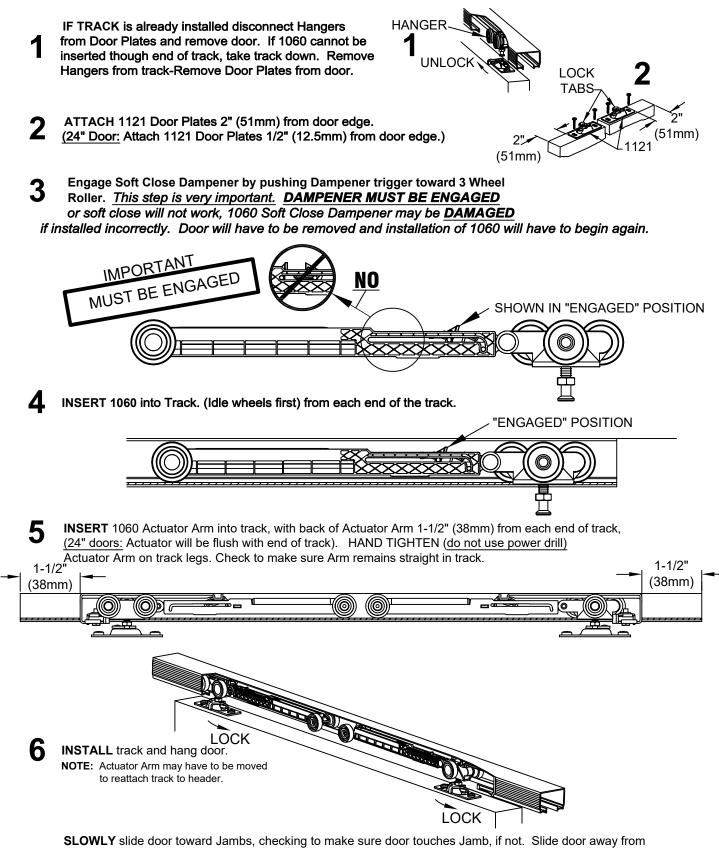

SLOWLY slide door toward Jambs, checking to make sure door touches Jamb, if not. Slide door away from Jamb and readjust Actuator Arm. Slowly close door again, checking to make sure soft close is working properly. Once confirmed, begin using door normally.

PLEASE CALL 1-800-837-5664 IF PARTS ARE MISSING / DO NOT RETURN TO PLACE OF PURCHASE IN1060SC L.E. JOHNSON PRODUCTS, INC. - 2100 STERLING AVE. - ELKHART, IN USA 46516 - (574) 293-5664 Rev 4/18 ------INSTRUCTION SHEET IS SUBJECT TO CHANGE------







1060 SOFT CLOSE

1060 Actuator Location / Minimum Door Width

ByPass Door Soft Close Installation Layout

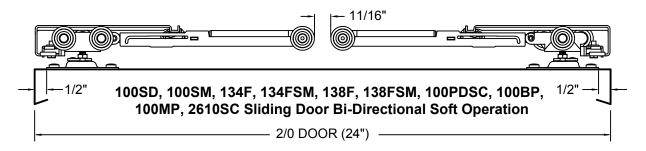

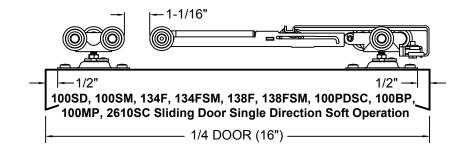

IN1060SP L.E. JOHNSON PRODUCTS, INC. - 2100 STERLING AVE. - ELKHART, IN USA 46516 - (574) 293-5664 New 12/18 ------INSTRUCTION SHEET IS SUBJECT TO CHANGE------