

L.E. Johnson Products, Inc. 2100 Sterling Ave. Elkhart, IN 46516 Ph: (574) 293-5664 Fax: (574) 294-4697 info@johnsonhardware.com www.johnsonhardware.com



Pocket Door Jamb Kit for 4%6" Walls for Doors up to 3'0"x6'8"



GENERAL DESCRIPTION


A fast, convenient method of finishing Pocket Door Frames. Just cut to length and install--no ripping of special thickness stock.

Pre-sanded so finishing is a snap.

(Since a wide variety of casings are available, they are not included.)





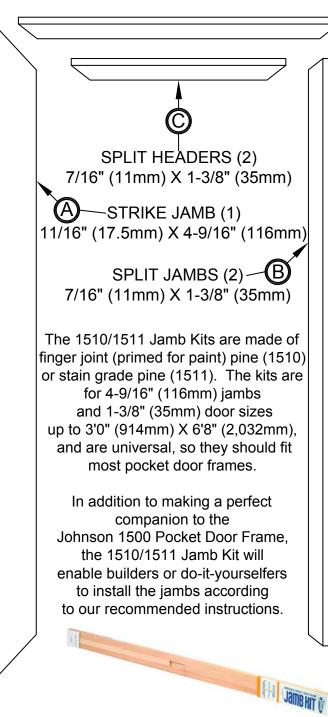








See online at: www.johnsonhardware.com/1510.htm

1510/1511 Pocket Door Jamb Kit for 4%6" Walls for Doors up to 3'0"x6'8"



1510/1511 Installation Overview

- **INSTALL** Pocket Door Frame following instructions as normal, including drywalling around opening. Carefully measure height "A" (from floor to bottom of frame header). Cut 11/16" (17.5mm) X 4-9/16" (2,032mm) Strike Jamb to this length.
- OPEN door fully (door will protrude into opening) and cut 2 split jambs to "B" Fasten to front edge of frame. Maintain minimum 3/16" (4.7mm) clearance on both sides of door. Raise or lower hangers to plumb door with split jambs.

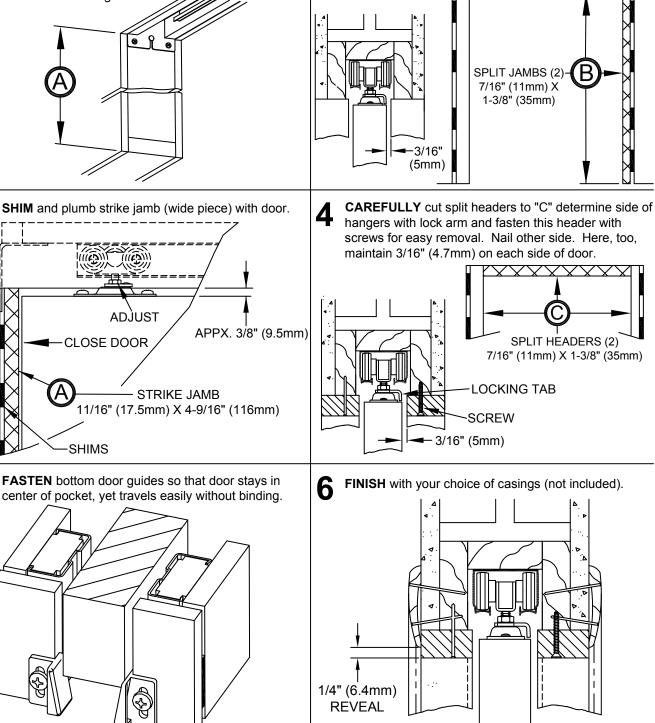

5

Elkhart, IN 46516 USA