

REDBACK


Pry Bar Tool Instructions

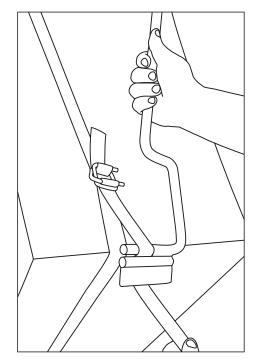

1 Feed tail of strap over bar and back through slot.

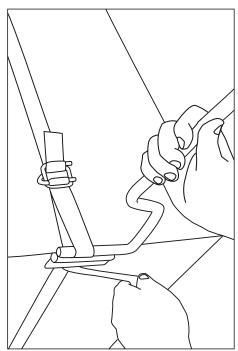

2 Brace tool against edge of load, remove slack and pull tail upward.

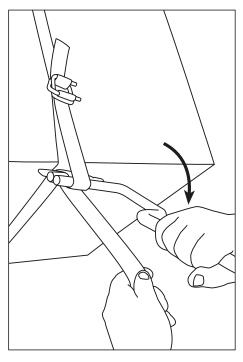

3 Keep tail horizontal to load strap and pull handle to apply tension. Advance tail through slot and repeat step 3 until buckle is closed.





1.866.455.1345 www.redback-industries.com

Copyright © 2010 All Rights Reserved Redback Industries, LLC