

Pergola – Column Adapter Instructions

FAIRWAY


ARCHITECTURAL RAILING SOLUTIONS



FairwayRailing.com

It is the responsibility of the installer to meet or exceed all code and safety requirements, and to obtain all required building permits. These instructions are only a guide and may not address every circumstance. The installer should determine and implement appropriate installation techniques for each situation. **FAIRWAY shall not be held liable for improper or unsafe installations.**

Kit Includes:

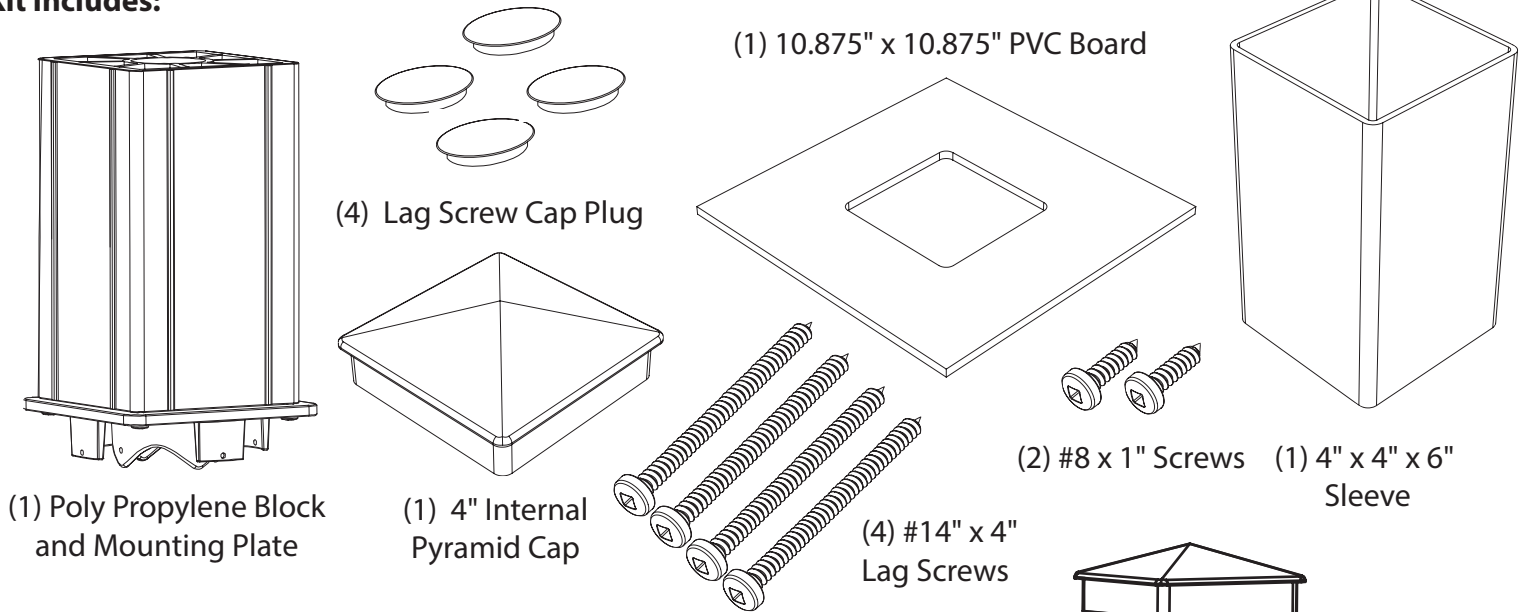

Step 1. Begin by attaching column adapter plate to internal structural post of column with #8 x 1" screws

Step 2. Slide routed PVC Board over mounting block (PVC Board may need trimmed on all 4 sides to fit column trim)

Step 3. Place 4" x 4" x 6" sleeve over mounting block

Step 4. Secure internal pyramid cap onto 4" x 4" x 6" sleeve with PVC glue

Step 5. Attach pergola joist to pergola adapter using included #14 x 4" lag screws. If lag screw cap plugs are desired, use a 5/8" spade bit to countersink lag screws. (See Below)

Step 6. Secure upper column trim to PVC Board with PVC glue

