


## SuperDr Ve 65 eries

## Now you can attach wire lath with SuperDrive

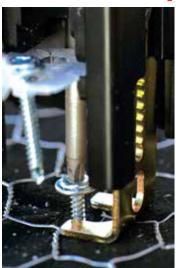



**LOX Lath Fastener** 





Wafer Head Tek3 - 18TPI

#8 x 1-1/4" Wafer Head - CDW8125L2Z LOX#2


## Featuring Patented LOX Technology





If you use power tools... You should use screws designed for power tools.

- Less Waste
- Less Wobble
- Less Cam Out
- No Slivers
- ioi pomoi
- Stick Fit
- High Torque
- Drives Off Angle
- Exceptional Bit Tip Life

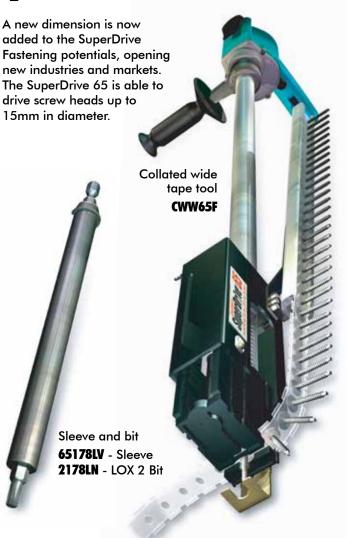

## **SuperDrive with Extension**

**65251T:** 6827 Makita, 2500RPM 3/4" to 3" w/o Extension

**6525XT:** 6827 Makita, 2500RPM 3/4" to 3" With Extension