



# CELECT®

CELLULAR COMPOSITE SIDING BY ROYAL

## Contractor Handbook



# ROYAL® Building Products

A Westlake Company



# TABLE OF CONTENTS


## Product Offering

|                     |      |
|---------------------|------|
| Siding Panels ..... | 4    |
| Accessories .....   | 4-11 |

## Installation


|  |       |
|--|-------|
| Storage & Handling .....                       | 12    |
| Wall Preparation .....                         | 12    |
| Key Vocabulary .....                           | 12    |
| Key Rules of Installation .....                | 12    |
| How to Measure .....                           | 13,14 |
| Cutting and Routing .....                      | 15    |
| Fastening .....                                | 15    |
| Touch up .....                                 | 16    |
| Glues and Sealants .....                       | 16,17 |
| Horizontal Lap Panel Installation .....        | 18-27 |
| Installation over non-nailable sheathing ..... | 22    |
| Board and Batten Panel Installation .....      | 28-37 |
| Shake Panel Installation .....                 | 38-46 |
| Trim Assembly Models .....                     | 47    |
| Trim Board Joints .....                        | 48    |
| Finish Trim Uses .....                         | 49    |
| Gable Trim Use .....                           | 50    |
| Cleaning and Maintenance .....                 | 51    |
| Replacing Damaged Panel .....                  | 52-54 |
| Typical Window Profile Illustrations .....     | 55-57 |
| Installing Shutters .....                      | 58    |
| Frequently asked Questions .....               | 59,60 |

# PRODUCT OFFERING

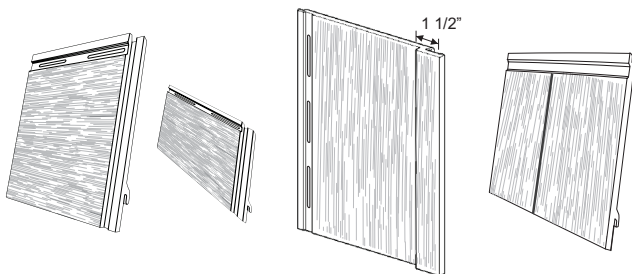

## SIDING

| PRODUCT CODE | EXPOSURE                   | LENGTH | UNIT SIZE       | COLOR AVAILABILITY | PROFILE HEIGHT |
|--------------|----------------------------|--------|-----------------|--------------------|----------------|
| CEL7         | 7" Horizontal Lap          | 12' 4" | 1 Sq./ Carton   | All 15             | 3/4"           |
| CEL4         | 4" Horizontal Lap          | 12' 6" | 1 Sq./ Carton   | All 15             | 3/4"           |
| CELB8        | 8" Vertical Board & Batten | 10'    | 1 Sq./ Carton   | All 15             | 3/4"           |
| CELSHK7      | 7" Shake                   | 4'     | 1/2 Sq./ Carton | All 15             | 3/4"           |

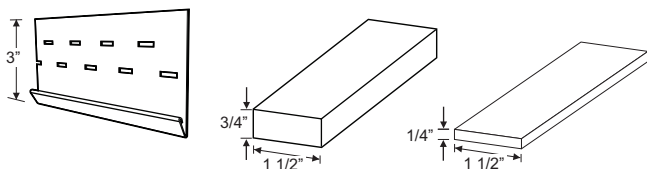


## STARTER STRIP AND UNPAINTED FURRING STRIP

| PRODUCT CODE | DESCRIPTION             | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|--------------|-------------------------|--------|-----------|--------------------|
| CELSS01      | Starter Strip           | 12'    | 24/CTN    | N/A                |
| S4S 1 X 2    | Unpainted Furring Strip | 16'    | 4/CTN     | White              |
| 2018         | Unpainted Lattice       | 16'    | 4/CTN     | white              |


## Colors

|              |     |            |     |              |     |
|--------------|-----|------------|-----|--------------|-----|
| Latte        | LAT | River Rock | RRK | Chestnut     | CHT |
| Carriage Red | CRR | Grove      | GRV | Pearl        | PRL |
| Willow       | WLW | Cotton     | COT | Oceana       | OCE |
| Shale        | SHL | Pottery    | POT | Wrought Iron | WRI |
| Frost        | FST | Chocolate  | CHC | Pine Brook   | BK  |

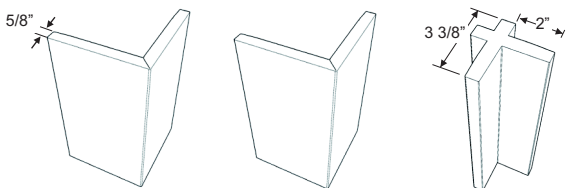

## CORNER

| DESCRIPTION | PRODUCT CODE   | EXPOSURE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-------------|----------------|----------|--------|-----------|--------------------|
| OCP 10'     | CELOC1PSTD10RM | 5 1/2"   | 10'    | 2/CTN     | ALL 15             |
| OCP 20'     | CELOC1PSTD20RM | 5 1/2"   | 20'    | 2/CTN     | ALL 15             |
| ICP 10'     | CELIC1PSTD10RM | 2"       | 10'    | 2/CTN     | ALL 15             |


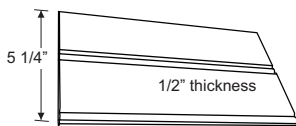


## BEADED PLANK

| DESCRIPTION  | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|--------------|--------------|--------|-----------|--------------------|
| BEADED PLANK | CELBDPLNK16  | 16'    | 2/CTN     | ALL 15             |



### Colors

|                            |                          |                            |
|----------------------------|--------------------------|----------------------------|
| Latte . . . . . LAT        | River Rock . . . . . RRK | Chestnut . . . . . CHT     |
| Carriage Red . . . . . CRR | Grove . . . . . GRV      | Pearl . . . . . PRL        |
| Willow . . . . . WLW       | Cotton . . . . . COT     | Oceana . . . . . OCE       |
| Shale . . . . . SHL        | Pottery . . . . . POT    | Wrought Iron . . . . . WRI |
| Frost . . . . . FST        | Chocolate . . . . . CHC  | Pine Brook . . . . . BK    |

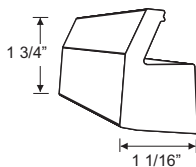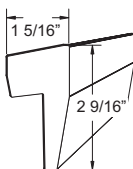


## GABLE TRIM & FINISH TRIM

| ACTUAL SIZE       | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-------------------|--------------|--------|-----------|--------------------|
| 1 5/16" X 2 9/16" | CELGT16      | 16'    | 2/CTN     | ALL 15             |
| 1" X 1 3/4"       | CELFT16      | 16'    | 2/CTN     | ALL 15             |

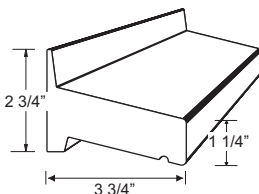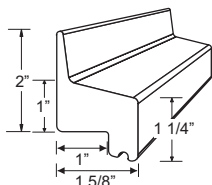

## WATER TABLE

| ACTUAL SIZE     | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-----------------|--------------|--------|-----------|--------------------|
| 2" X 1 5/8"     | CELWT16      | 16'    | 2/CTN     | ALL 15             |
| 2 3/4" X 3 3/4" |              | 16'    | 2/CTN     | ALL 15             |





## TRIMBOARD

| NOMINAL SIZE | ACTUAL SIZE   | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|--------------|---------------|--------------|--------|-----------|--------------------|
| 5/8" X 4"    | 5/8" X 3 1/2" | CELS4S58418  | 16'    | 2/CTN     | ALL 15             |
| 5/8" X 6"    | 5/8" X 5 1/2" | CELS4S58618  | 16'    | 2/CTN     | ALL 15             |
| 5/8" X 8"    | 5/8" X 7 1/4" | CELS4S58818  | 16'    | 2/CTN     | ALL 15             |
| 5/8" X 10"   | 5/8" X 9 1/4" | CELS4S581018 | 16'    | 2/CTN     | ALL 15             |
| 1 X 2        | 3/4" X 1 1/2" | CELS4S1218   | 16'    | 2/CTN     | ALL 15             |
| 5/4 X 4      | 1" X 3 1/2"   | CELS4S54418  | 16'    | 2/CTN     | ALL 15             |
| 5/4 X 6      | 1" X 5 1/2"   | CELS4S54618  | 16'    | 2/CTN     | ALL 15             |
| 5/4 X 8      | 1" X 9 1/4"   | CELS4S54818  | 16'    | 2/CTN     | ALL 15             |


## Colors

|              |     |            |     |              |     |
|--------------|-----|------------|-----|--------------|-----|
| Latte        | LAT | River Rock | RRK | Chestnut     | CHT |
| Carriage Red | CRR | Grove      | GRV | Pearl        | PRL |
| Willow       | WLW | Cotton     | COT | Oceana       | OCE |
| Shale        | SHL | Pottery    | POT | Wrought Iron | WRI |
| Frost        | FST | Chocolate  | CHC | Pine Brook   | BK  |

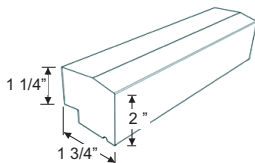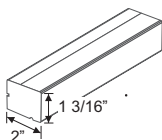


## SILL NOSE

| DESCRIPTION       | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-------------------|--------------|--------|-----------|--------------------|
| SILL NOSE 1 3/16" | CELSILL216   | 16'    | 2/CTN     | ALL 15             |
| SILL NOSE 1 3/4"  | CELSILL13416 | 16'    | 2/CTN     | ALL 15             |

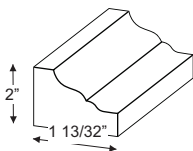


RAMS CROWN

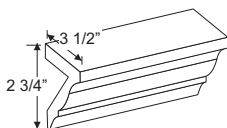

ONE PIECE CROWN

## CROWN

| DESCRIPTION     | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-----------------|--------------|--------|-----------|--------------------|
| RAMS CROWN      | CELRMSCRN16  | 16'    | 2/CTN     | ALL 15             |
| ONE PIECE CROWN | CELCUC31212  | 16'    | 2/CTN     | ALL 15             |


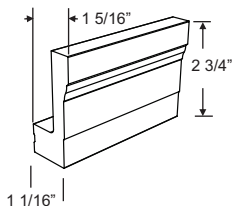


## BRICKMOULD

| DESCRIPTION | PRODUCT CODE | LENGTH | UNIT SIZE | COLOR AVAILABILITY |
|-------------|--------------|--------|-----------|--------------------|
| BRICKMOULD  | CELBRCCK16   | 16'    | 2/CTN     | ALL 15             |

### Colors

|                  |     |                    |     |                    |     |
|------------------|-----|--------------------|-----|--------------------|-----|
| Latte . . . . .  | LAT | River Rock . . . . | RRK | Chestnut . . . . . | CHT |
| Carriage Red . . | CRR | Grove . . . . .    | GRV | Pearl . . . . .    | PRL |
| Willow . . . . . | WLW | Cotton . . . . .   | COT | Oceana . . . . .   | OCE |
| Shale . . . . .  | SHL | Pottery . . . . .  | POT | Wrought Iron . .   | WRI |
| Frost . . . . .  | FST | Chocolate . . . .  | CHC | Pine Brook . . . . | BK  |

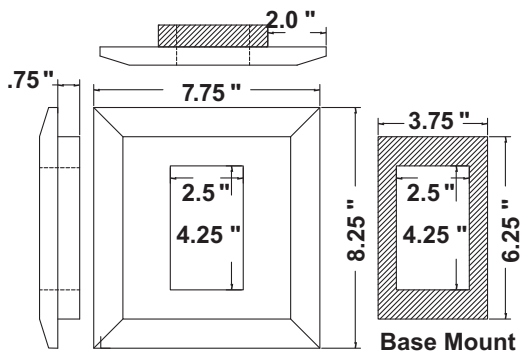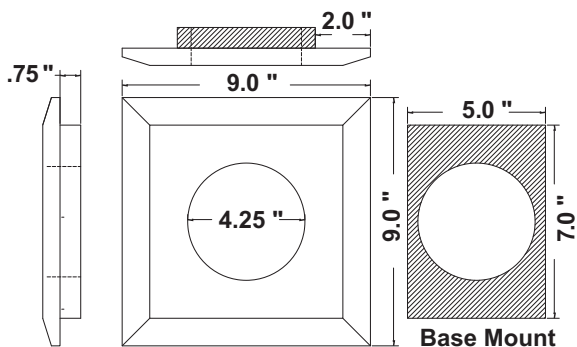



## BLOCKS & MOUNTS

| DISCRIPTION                | PRODUCT CODE | UNIT SIZE | COLOR AVAILABILITY |
|----------------------------|--------------|-----------|--------------------|
| VENT/LIGHT 9" X 9"         | CELBVSH      | 1 / BAG   | ALL 15             |
| ELECTRICAL 8-1/4" X 7-3/4" | CEELMSH      | 1/ BAG    | ALL 15             |

### Colors

|                        |                          |                         |
|------------------------|--------------------------|-------------------------|
| Latte . . . . . LAT    | River Rock . . . . . RRK | Chestnut . . . . . CHT  |
| Carriage Red . . . CRR | Grove . . . . . GRV      | Pearl . . . . . PRL     |
| Willow . . . . . WLW   | Cotton . . . . . COT     | Oceana . . . . . OCE    |
| Shale . . . . . SHL    | Pottery . . . . . POT    | Wrought Iron . . . WRI  |
| Frost . . . . . FST    | Chocolate . . . . . CHC  | Pine Brook . . . . . BK |



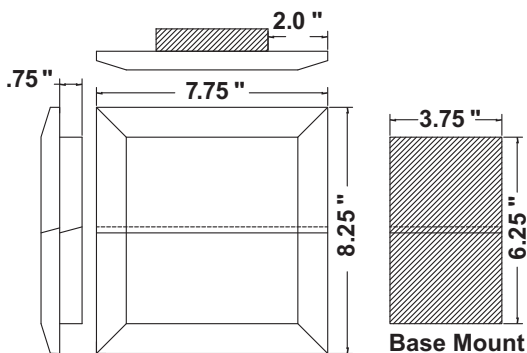
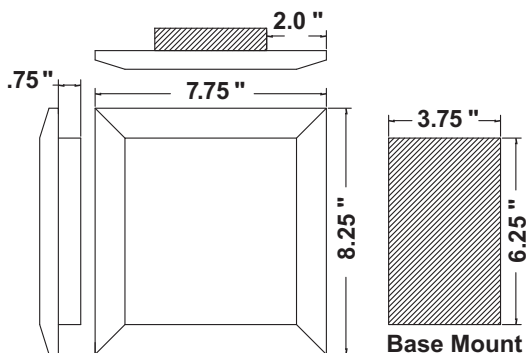


## BLOCKS & MOUNTS

| DISCRIPTION               | PRODUCT CODE | UNIT SIZE | COLOR AVAILABILITY |
|---------------------------|--------------|-----------|--------------------|
| UNIVERSAL 8-1/4" X 7-3/4" | CELSTMSH     | 1 / BAG   | ALL 15             |
| SPLIT 8-1/4" X 7-3/4"     | CELSPMSH     | 1/ BAG    | ALL 15             |

### Colors

|                        |                          |                        |
|------------------------|--------------------------|------------------------|
| Latte . . . . . LAT    | River Rock . . . . . RRK | Chestnut . . . . . CHT |
| Carriage Red . . . CRR | Grove . . . . . GRV      | Pearl . . . . . PRL    |
| Willow . . . . . WLW   | Cotton . . . . . COT     | Oceana . . . . . OCE   |
| Shale . . . . . SHL    | Pottery . . . . . POT    | Wrought Iron . . . WRI |
| Frost . . . . . FST    | Chocolate . . . . . CHC  | Pine Brook . . . . BK  |

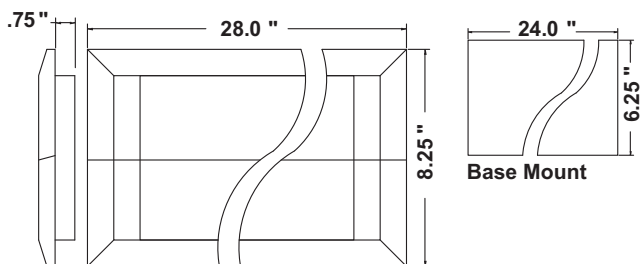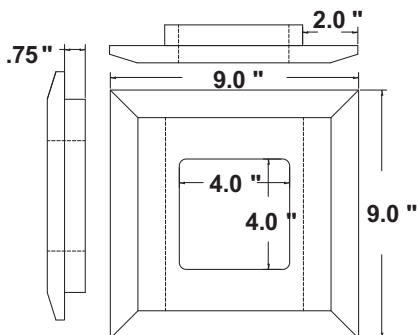


## BLOCKS & MOUNTS

| DISCRIPTION             | PRODUCT CODE | UNIT SIZE | COLOR AVAILABILITY |
|-------------------------|--------------|-----------|--------------------|
| RECESSED 9" X 9"        | CELRCMSH     | 1 / BAG   | ALL 15             |
| GANG BLOCK 28" X 8-1/4" | CELGGBSH     | 1/ BAG    | ALL 15             |

## Colors

|                            |                          |                            |
|----------------------------|--------------------------|----------------------------|
| Latte . . . . . LAT        | River Rock . . . . . RRK | Chestnut . . . . . CHT     |
| Carriage Red . . . . . CRR | Grove . . . . . GRV      | Pearl . . . . . PRL        |
| Willow . . . . . WLW       | Cotton . . . . . COT     | Oceana . . . . . OCE       |
| Shale . . . . . SHL        | Pottery . . . . . POT    | Wrought Iron . . . . . WRI |
| Frost . . . . . FST        | Chocolate . . . . . CHC  | Pine Brook . . . . . BK    |

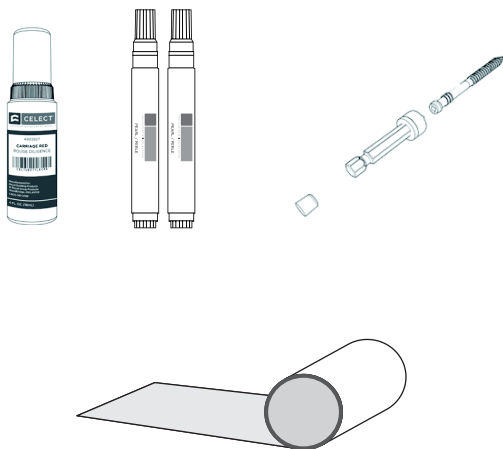

## MISCELLANEOUS ACCESSORIES

| DESCRIPTION        | PRODUCT CODE | UNIT SIZE      | COLOR AVAILABILITY |
|--------------------|--------------|----------------|--------------------|
| TOUCH UP BOTTLE    | CELTUBTTL    | 1 / PACK       | ALL 18             |
| TOUCH UP MARKER    | CELTUKIT     | 2 / PACK       | ALL 18             |
| CORTEX SCREWS      | CELCRTX250   | 375/CARTON     | ALL 18             |
| ALUMINUM TRIM COIL | CLCOIL50STD  | 24" X 50' ROLL | ALL 18             |
|                    |              |                |                    |

## Colors

|                        |                          |                         |
|------------------------|--------------------------|-------------------------|
| Latte . . . . . LAT    | River Rock . . . . . RRK | Chestnut . . . . . CHT  |
| Carriage Red . . . CRR | Grove . . . . . GRV      | Pearl . . . . . PRL     |
| Willow . . . . . WLW   | Cotton . . . . . COT     | Oceana . . . . . OCE    |
| Shale . . . . . SHL    | Pottery . . . . . POT    | Wrought Iron . . . WRI  |
| Frost . . . . . FST    | Chocolate . . . . . CHC  | Pine Brook . . . . . BK |

## STORAGE AND HANDLING

If bundles are to be stored outside, do not lay them directly on the ground. Lay them on wood supports (e.g. 2X4)

Do not store under tarps.

Do not store bundles upright.

Do not store bundles more than 5 high.

Keep away from heat sources.

**IMPORTANT:** Handling of Celect Corner Posts

- Do not stack on top of corners
- Store corners on level surface
- Store out of direct sunlight
- Keep corners in pack until installed.

## WALL PREPARATION

Celect siding is a rain screen but not intended to be a water resistive barrier. Therefore, Celect siding must be installed over a continuous water-resistive barrier with properly integrated flashing.

Celect must be applied over rigid sheathing that provides a smooth flat surface. Never install Celect siding directly to open framing/studs. Celect must be installed over either solid nailable sheathing, rigid sheathing with minimum 1X6 furring strips or rigid sheathing and elongating the nailing slots (page 22).

### Re-siding

It may not be necessary to remove existing siding providing all loose boards are re-secured and any rotten boards are replaced. Install furring strips or wall leveling siding underlayment to create a flat surface for the siding. Follow all other details outlined above.


## KEY RULES

- Nail in the center of the nailing slot unless pinning is necessary.
- Fasteners must be placed in the center of the nailing slots at approximately 16" spacing leaving about 1/32" between the head of the fastener and the nailing hem of the panel. Celect panels expand and contract through temperature changes.
- Never face nail the panels.

# HOW TO MEASURE

## Estimating the Required Materials

- All houses can be broken down into shapes of rectangles or triangles, or a combination of both.
- The area to be sided can be determined by measuring the height and width of the house, including windows.
- Total all of the measurements for the areas to be sided. Windows and doors are not usually deducted. Including them will provide an allowance factor for waste. If the windows and doors are extremely large (such as a garage or sliding glass doors), some deductions can be made
- To estimate the amount of starter strip required, measure the linear feet around the entire base of the house.
- Add siding to all material estimates to allow for waste, depending on the pitch of the roof and other house-specific factors.
- Every 100 square feet (9.29 square meters) is called a "square" for ordering purposes.

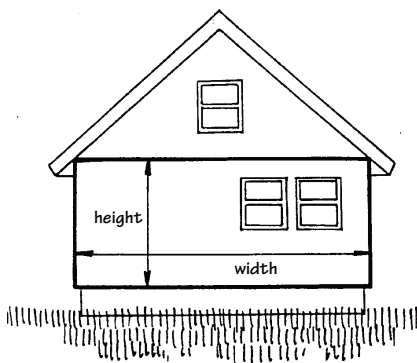


Horizontal Siding and Shingles


Height \_\_\_ feet (meters) x width \_\_\_ feet (meters) = \_\_\_ square feet (square meters)

Vertical Siding (**Pieces of vertical siding**)


Number of panels at \_\_\_ inches (mm) wide and 10 feet long  
width \_\_\_ feet (meters) , \_\_\_ inches (mm)

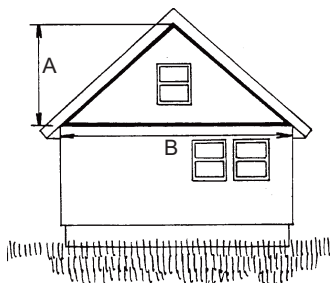

Horizontal Siding  $\frac{1}{2} A \times B =$  \_\_\_\_ total area of gable (square feet/meters)

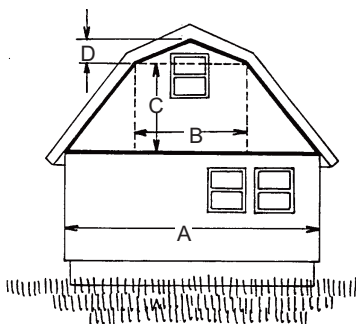

Horizontal Siding  $\frac{1}{2} (A + B) \times C + \frac{1}{2} B \times D =$  \_\_\_\_ total area of gable (square feet/meters)

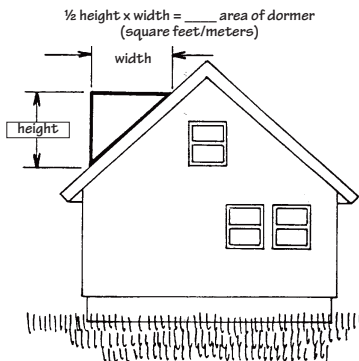

$\frac{1}{2} \text{ height} \times \text{width} =$  \_\_\_\_ area of dormer  
(square feet/meters)

## **CUTTING AND ROUTING**

### **Siding**

Circular or miter saws with a trim or plywood blade.

Jig saw, rotary tools (Dremel, router, etc.) can be useful for cutting around obstructions.

### **Trim**

The use of a compound miter saw with a trim blade is recommended.

## **FASTENING**

### **Siding**

- Corrosion-resistant nails (stainless steel nails or galvanized roofing nails) with a minimum head diameter of  $\frac{3}{8}$ ",  $\frac{1}{8}$ " shank and minimum  $1\frac{1}{2}$ " in length (minimum 2"(50.8mm) in required in Canada).
- Note: High wind areas may necessitate ring shank nails.
- Corrosion resistant, #8 truss or pan head screws with a length sufficient to penetrate a solid nailable surface (framing or furring) a minimum of  $\frac{3}{4}$ " in depth.

### **Trim**

- Select Cortex or Pro-Plug screws and plugs are recommended to secure finished Select Trim pieces.
- If other trim fasteners are used, they must be fasteners intended for exterior use with PVC trim such as stainless steel or hot dipped galvanize.
- DO NOT USE staples, small brads, ring shank or wire nails.
- For "padding out" trim, fasteners should be long enough to penetrate the solid wood substrate a minimum of  $1\frac{1}{2}$ ".
- Professional grade PVC adhesive for joining trim pieces. PVC adhesive along with Cyanoacrylate (super glue) and activator as a "clamp" can be used.(See Gluing Page 13)

## TOUCH UP

- Use Celect Paint “dauber” bottle for larger areas and for coating exposed cut ends of Celect siding panels and trim.
- If repainting is necessary, use ONLY “heat reflective” paints formulated for use on PVC products. Follow the paint manufacturers application instructions.

## GLUES AND SEALANTS

- Use Professional grade PVC adhesives for joining trim pieces.

### Tip:

**Two Part Gluing Method:** PVC adhesive along with Cyanoacrylate (super glue) and activator as a “clamp” **can be** used. However, these glues are **not sufficient to use alone**. They must be used in conjunction with PVC cement. (2P10 is an only an example of a Cyanoacrylate/Activator system. There are others.)




**Cyanoacrylate Glue  
& Activator**

**PVC Cement**



## USING A TWO PART GLUING METHOD


- First place a bead of PVC cement along one edge of one of the pieces to be glued.
- Next place a similar bead of Cyanoacrylate glue.
- Spray the activator along the other piece to be glued.  
**Do not spray the coated face of the piece.**
- Carefully join the two pieces together making sure that they are aligned properly. Hold the pieces in place for 5-10 seconds or until the Cyanoacrylate glue adheres. This will allow for installation of the piece and give sufficient time for the PVC cement to create a permanent bond.

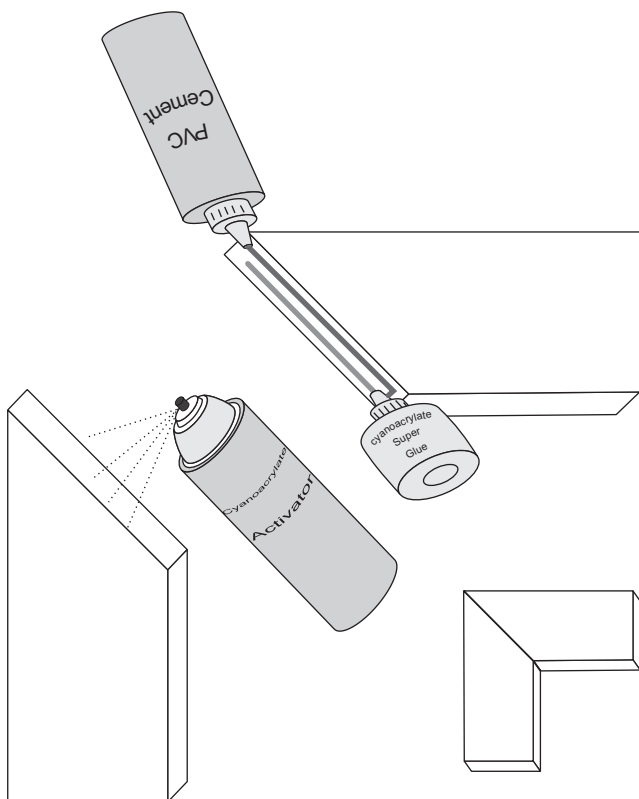

## 4"AND 7" LAP INSTALLATION


### INSTALLATION SEQUENCE

- 1 Weather Barrier & Flashings
- 2 Furring strips for trim
- 3 Inside Corner Posts
- 4 Starter Strip for Panels
- 5 Select Siding Panels
- 6 Window, Door, Etc. Trim

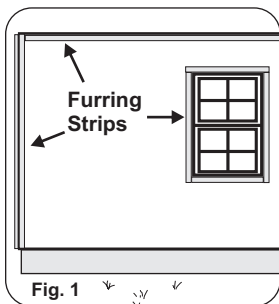

- After preparing the walls for the siding installation (see *Wall Preparation pg. 1*), install 1X2 furring around all windows, doors, outside corners, etc. This must be done anywhere the ends of the siding will be terminated (Fig 1-2).
- Make sure to install the proper flashing as required by specific local building codes (Fig 2)


NOTE: if the furring strips will be completely hidden by the trim, treated 1X2 furring can be used in place of PVC strips. Secure the furring every 8" - 12".

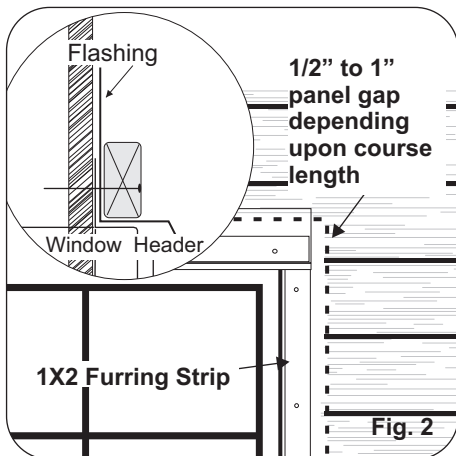


## STARTER STRIP & WORKING OVER OBSTACLES


Strike a chalk line 4" above the point you wish the bottom of the panel(s) to sit.

- Install starter strip aligning the top of the strip with the chalk line and fastening every 8"-12" (Fig. 3).

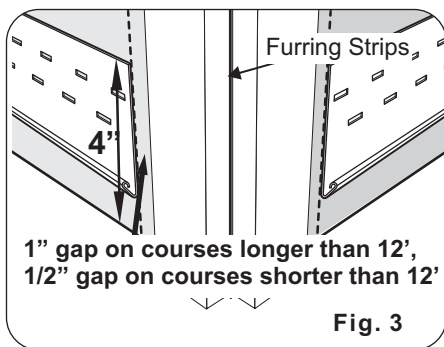

- In certain situations, it may be necessary to remove a bottom section from of the panels to accommodate variations in the first course such as porch floors, etc. In these situations, where the bottom lock is removed, the cut edge of the panel(s) must be covered by trim. Select Finish Trim can be used (Fig 4) or Custom trim can be fabricated with aluminum trim sheet. If trim sheet is used, keep in mind that the face of the channel or trim only needs be wide enough to cover the cut edge of the panel by 1/2" (Fig 5).

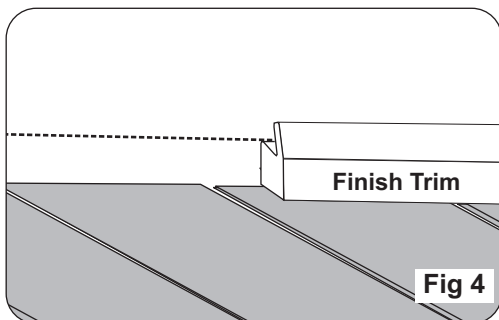

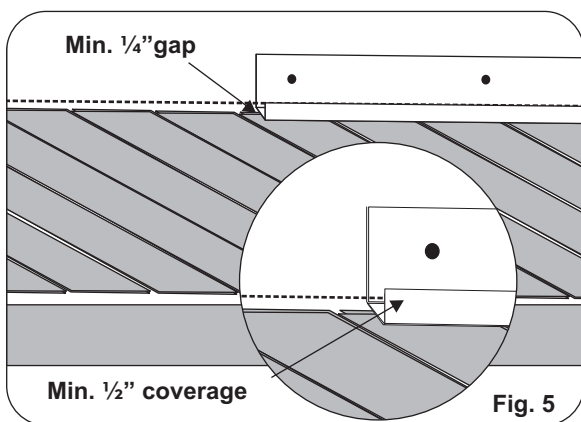

## INSIDE CORNER POSTS


- Install any inside corners. Fasten the inside corners using weather resistant screws placed inside the pocket of the corner no more than 16" apart (Fig 6).

Unlike the other finished trim, inside corners are applied before the siding.

NOTE: Make sure not to draw the pocket in when fastening to the wall.



The pocket width must remain 3/4".

Use a scrap piece of siding as a spacer in the pocket. The inside of the corner post should not lay against the siding.

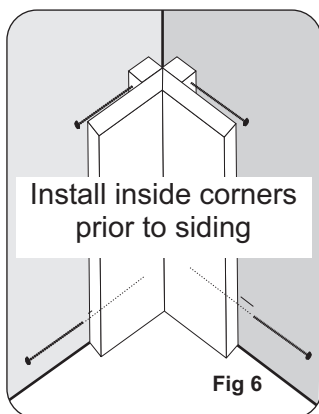


## EXPANSION GAP

- Install the Celect siding panels keeping the ends of the panels 1" away from the furring strips if the course is over 12' long, 1/2" away if the course is less than 12' long.
- Fasten the panels by placing a fastener in the center of the slot approximately every 16" leaving about 1/32" between the head of the fastener and the nailing hem of the panel. Celect panels expand and contract through temperature changes. (Fig. 7).
- If the course is longer than 12' pin the center of the course (not each panel) by placing a fastener in each side of one slot keeping in mind that the "center" of each course will change as you work around windows, doors, etc. (Fig. 8).

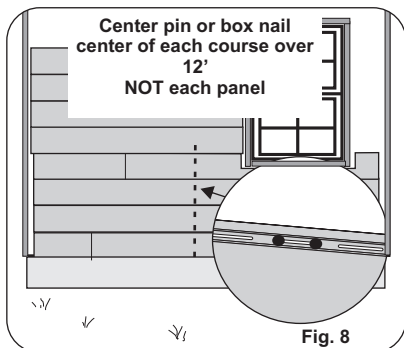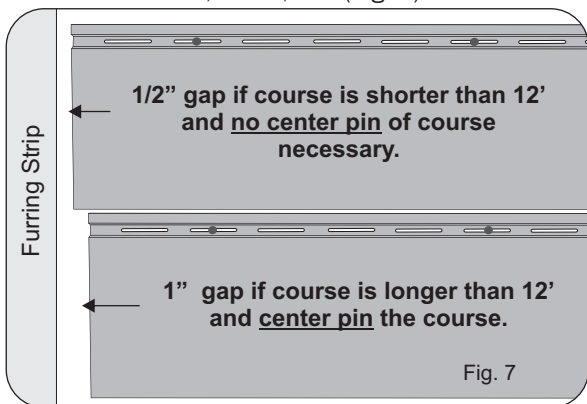


## MAXIMUM WALL LENGTH

- Select siding panels can be installed continuously up to 60'. If the siding courses are longer than 60', break the course(s) with an expansion joint. This joint can be fabricated using furring strip and 1'X6" (Fig. 9).

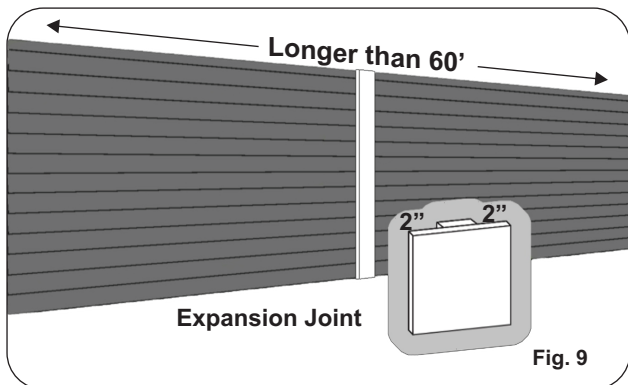



## INSTALLATION OVER NON-NAILABLE SHEATHING

- In situations where it is not possible to place the nail in the center of the nailing slot (foam sheathing, etc.) it is permissible to remove the material in between two slots to allow for more room for expansion and contraction (Fig. 10).
- Make certain that;
  - 1) there is a minimum of 1" between a nail and the end of the nailing slot.
  - 2) the edges of the extended slot are cut cleanly and even with the existing slots.

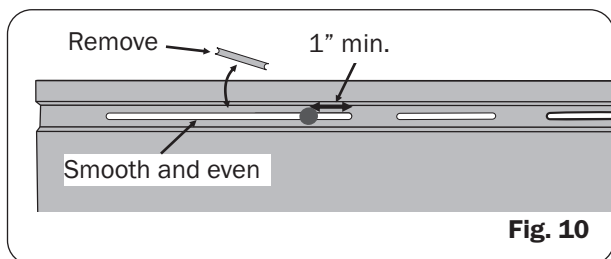

## ROOF LINES


- When installing over roof lines, use the same 30' rule. If the longest panel will be under 30', there is no need for a trim board. The panels can be install within 1/2" from the roof line and pinned there to hold the panel edges even; letting them expand and contract away from the pinned area.
- If the longest panels will be over 30' in length, there must be a furring installed, a 1" gap between the furring and the end of the panel(s) and a trim board installed to hide the ends of the panel(s). (Fig. 11-12)

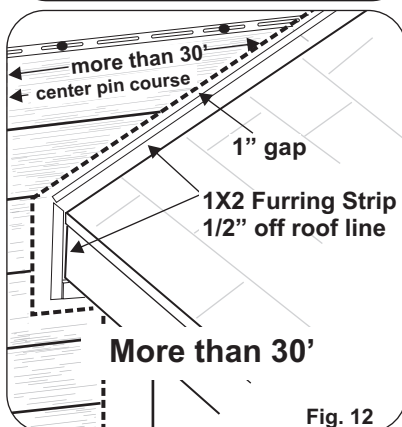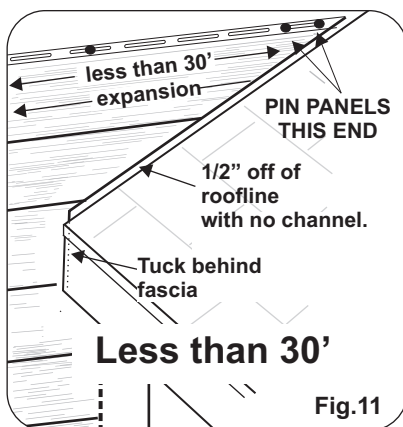

## GABLE TRIM


The gable trim is a suitable alternative to a standard trim board if a small profile is desired.

- Measure from the soffit  $1\frac{1}{2}"$  and strike a chalk line.
- Install the panels aligning the ends with the line leaving the  $1\frac{1}{2}"$  gap for panel expansion and contraction.
- The width of the gable cannot extend beyond 30'. For gables beyond 30', a furring strip and minimum  $3\frac{1}{2}"$  trim board should be used.
- Install the gable trim using Cortex or Pro Plug screws and matching plugs. Place fasteners approximately every 12"-16" being careful not to place them in the expansion gap.

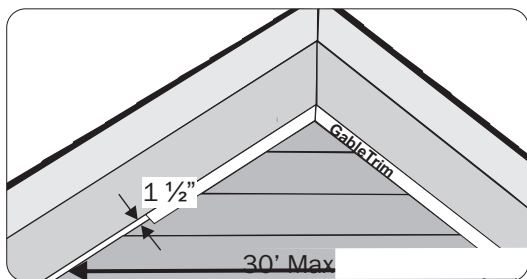

## CUTTING MITERS ON GABLE TRIM

The multiple angles designed into the finish trim and the gable trim allow for the adjustment of the pocket width desired depending upon the application. However, if the installation includes mitering two adjacent pieces of trim together such as at the peak of a gable, it is important that the trim be placed correctly when cutting as shown in figure 13. A scrap piece of  $\frac{3}{4}"$  thick material can be used as a guide to making placement easier.

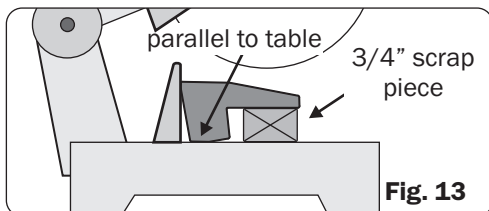


**Fig. 13**





## FIXTURE MOUNTS

- Celect fixture mounts are available for obstructions such as lighting, dryer vents, water faucets, etc. Begin by installing the base “ring”. Install the siding panels allowing for the appropriate expansion gap depending upon the length of the siding course. Center and secure the face plate with two Celect Cortex trim screws and plugs (Fig 14)
- Fixture mounts can also be field constructed using Cellular PVC, wood, etc. The pocket depth must be 2” for courses over 12’ and 3/4” for courses under 12’ to allow for the appropriate expansion gap.
- For courses under 12’ preformed vinyl siding fixture mounts can be used. In this case, the expansion gap should be 3/8”.

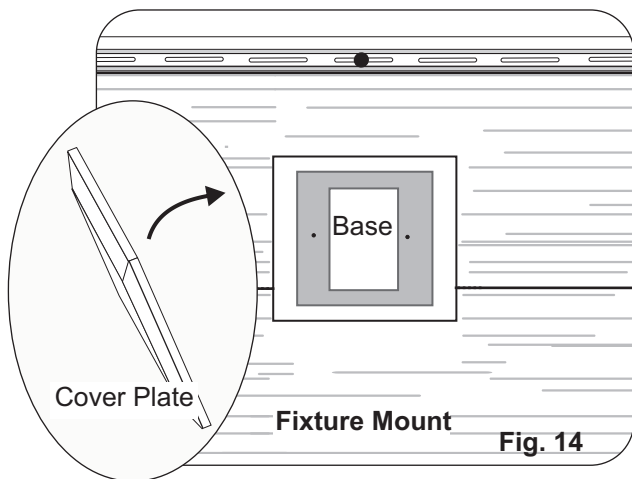

## TOP COURSE INSTALLATION


- Depending upon the trim you choose to use to finish the top of the wall, measure and cut the top course panel to fit. A freeze board, finish or gable trim can be applied to cover the fasteners and give a finished appearance.
- Install the panel securing it by placing nails along the cut edge of the panel approximately every 16". **DO NOT FACE NAIL THE PANEL.** The head of the nails will hold the panel back to the wall and the shaft of the nail will keep the panel from raising and becoming unlocked from the panel below it (Fig 15).

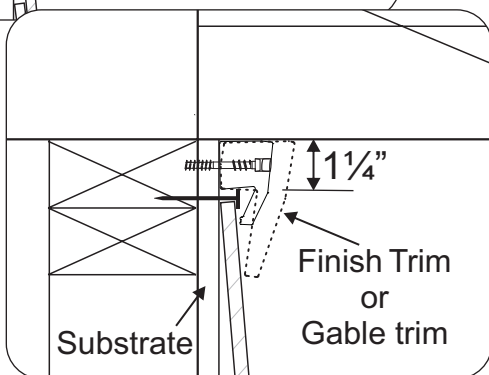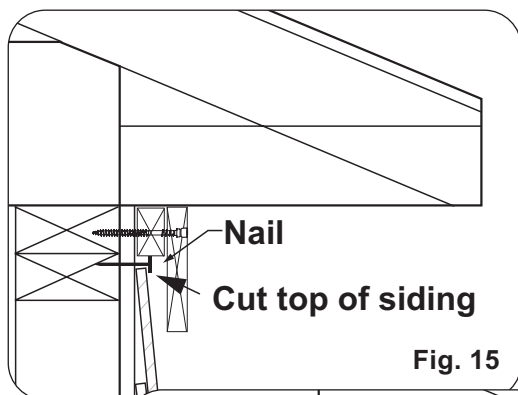

## TRIM INSTALLATION


- Install trim over furring strips (Fig. 16-17). It is easiest to assemble window and door trims before applying them to the wall. When using Celest trim, be sure to build the trim slightly larger ( $1/8"$  each side) than the window or door to give the finished frame room to expand and contract through temperature changes.
- Cortex® or Pro Plug® screws and matching plugs should be used when installing Celest trim. Space the fasteners no more than 16" apart and no closer than 2" from the end of the trim. Make sure not to fasten through the siding or into the expansion pocket.

*Note: See trim assembly section for more.*

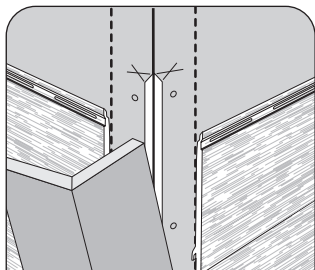

Cortex® Hidden Fastening System

**Fig. 16**

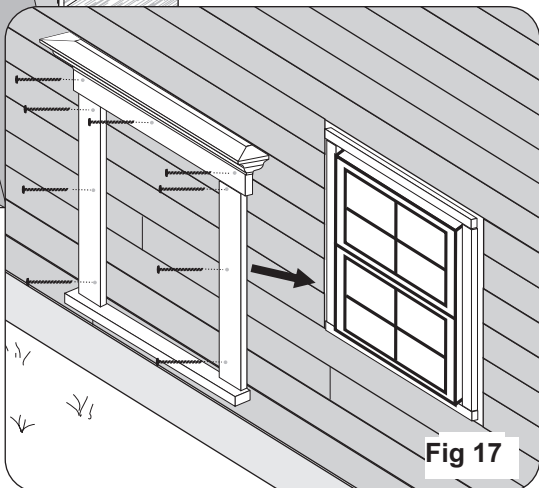


**Fig 17**

# BOARD AND BATTEN INSTALLATION


## **BOARD AND BATTEN**

- 1 Weather Barrier & Flashings
- 2 Furring strips for trim
- 3 Inside Corner Posts
- 4 Select Board & Batten Siding Panels
- 5 Window, Door, Etc. Trim

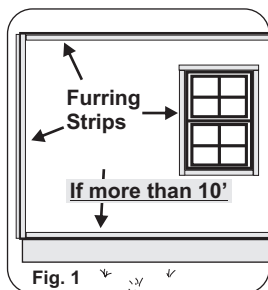

- After preparing the walls for the siding installation (see *Wall preparation pg. 8*), install 1X2 furring around all windows, doors, outside corners, etc. This must be done anywhere the ends of the siding terminate with the exception of along the bottom of the course up to 10'. *If the panels are longer than 10' a furring strip and trim will be necessary along the bottom as well.* (Fig 1-2)
- Make sure to install the proper flashing as required by specific local building codes (Fig 2)

**NOTE:** If no solid nailable substrate exists, either furring strips installed horizontally at 12" spacing or solid nailable sheathing **MUST** be applied prior to the installation of the vertical panels.

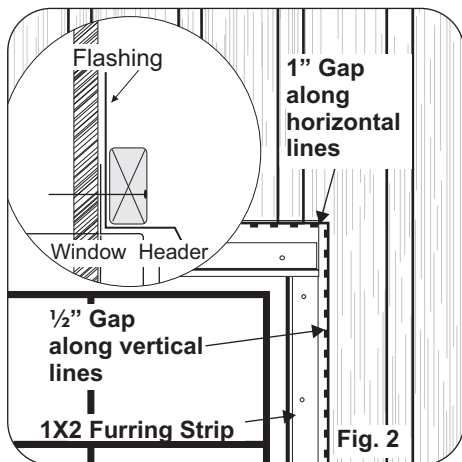

## INSIDE CORNER POSTS


Inside corner posts are the only finish “trim” piece to be installed prior to the siding panels.

- Install any inside corners. Fasten the inside corners using weather resistant screws placed inside the pocket of the corner no more than 16” apart. Unlike the other finished trim, inside corners are applied before the siding.

NOTE: Make sure not to draw the pocket in when fastening to the wall.

The pocket width must remain  $\frac{3}{4}$ ". Use a scrap piece of siding as a spacer in the pocket. The inside of the corner post should not lay against the siding.



- As a general rule, you will install panels from the inside corner outward on both sides.
- ***If installing between two inside corners,*** 1) install one inside corner, 2) install the panels then, 3) install the other inside corner. This way you can secure the last panel going into the second inside corner. Note that you will only be able to secure the second inside corner on one side. Be careful to keep it even and square to the corner.

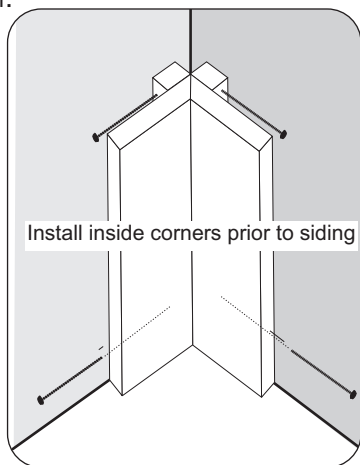

## CREATING A BALANCED APPEARANCE



It's important to create a more "balanced" appearance across the wall; meaning, the batten strips appear to be the same distance from both corners. The following describes how to achieve this.

- Using a chalk line, strike a plumb line 1/2" from the furring strips on both the starting side and the ending side.
- Divide the length of the wall in inches by 8 (Fig. 3)
- Then divide any fraction of a panel into 2. This will give you the width of exposure for both the starting panel and the ending panel (Fig. 4).

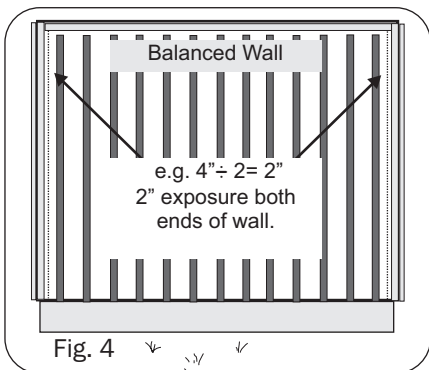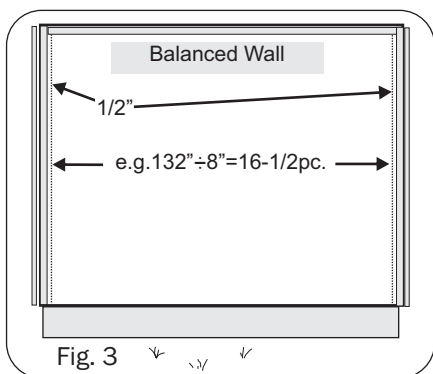


## FIRST PANEL

Once the exposure for the first panel has been calculated (Fig 3-4), measure from the edge above the nailing slots across the panel the calculated measurement plus  $\frac{3}{8}$ " to compensate for the lock on the panel.

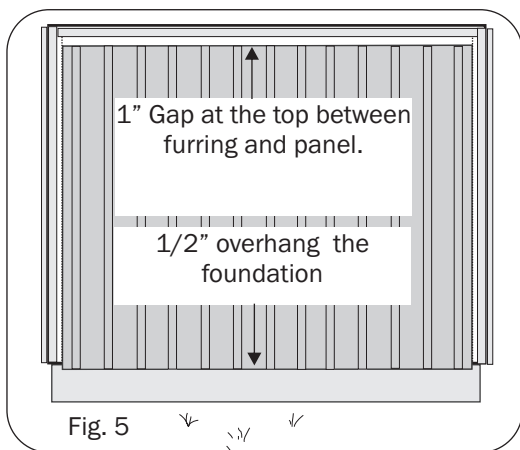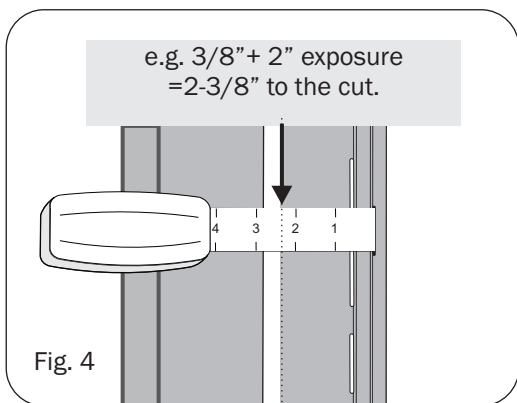

## PANEL INSTALLATION

- The length of the panel should be 1" from the top furring and a minimum of 1/2" over the foundation at the bottom (Fig. 5)
- Install the first panel by placing the cut edge along the chalk line.
- Hold the panel in place by placing the first fastener at the top of a nailing slot **no more than 12" from the bottom edge of the panel**. Do not drive tight. Leave approximately 1/32" between the head and the panel.
- Make sure the panel is plumb and continue fastening it placing the fasteners in the center of the slots at 8"-12" intervals (Fig. 6)

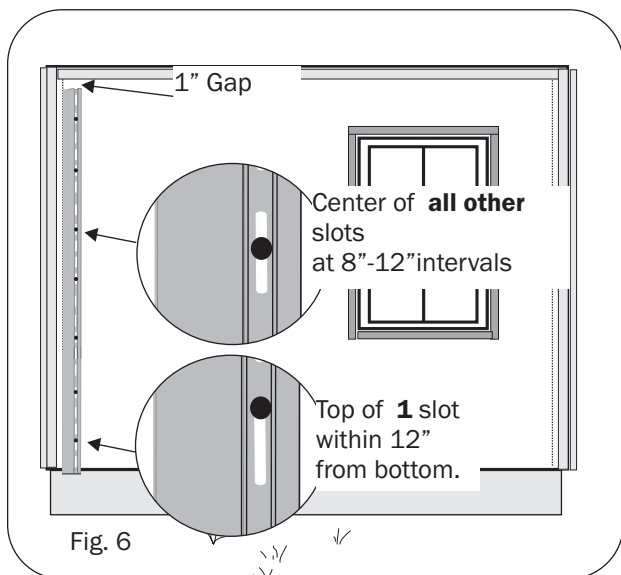



## PANEL INSTALLATION CONT'D

- Continue installing panels across the wall making certain that 1) the lock is fully engaged and 2) the panel is “pinned” into place by 1 fastener within 12” of the bottom of the panel.
- For the best look, make sure that all the panels are even across the bottom of the wall.
- When cutting and installing around windows, doors, etc., allow for 1/2” gap along any vertical cuts always and 1/2” along horizontal cuts up to 8’ and 1” beyond 8’ (Fig 7)


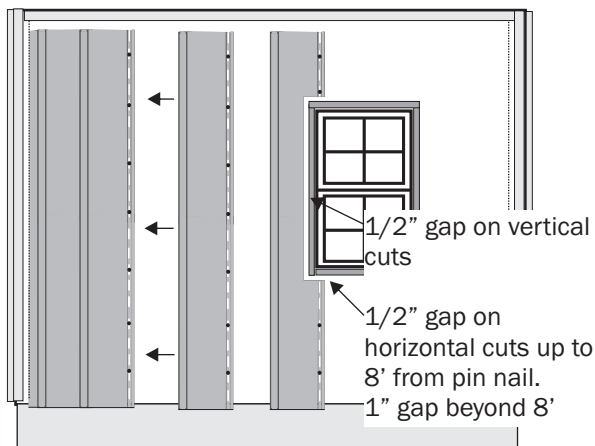


Fig. 7


## MORE THAN ONE COURSE

If the wall is taller than one course (above 10'), the courses must be separated by a transition piece. The diagrams below show two examples. Note that, if the panels are being held closer than 1" to trim at the bottom of the course, there must be a 1" gap at the top to allow for expansion of the panel(s)

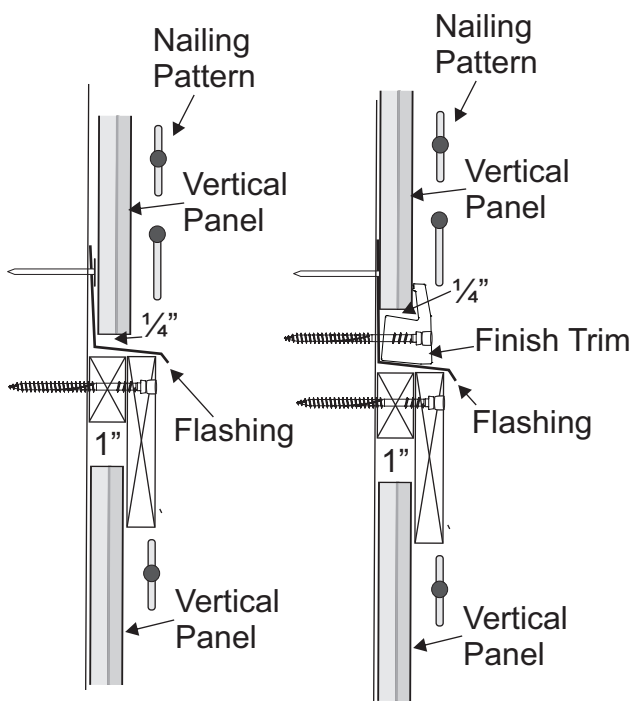

## FIXTURE MOUNTS

- Celect fixture mounts are available for obstructions such as lighting, dryer vents, water faucets, etc. Begin by installing the base “ring”. Install the siding panels allowing for the appropriate expansion gap depending upon the length of the siding course. Center and secure the face plate with two Celect Cortex trim screws and plugs (Fig 8)
- Fixture mounts can also be field constructed using Cellular PVC, wood, etc. The pocket depth must be 2” for courses over 12’ and 3/4” for courses under 12’ to allow for the appropriate expansion gap.
- Preformed vinyl siding fixture mounts can be used. In this case, the expansion gap should be 3/8”.

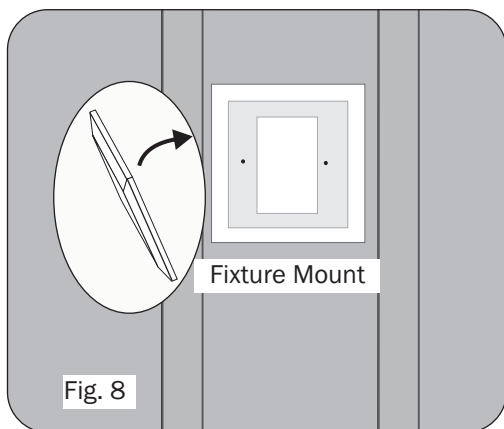

## FINAL PANEL INSTALLATION

- Measure for the last panel by measuring from above the nailing hem of the next to last panel to the chalk line and add 1-1/2”.
- Measure from the batten strip side of the last panel and cut.
- Prior to installing the panel, pre-drill a hole within 12” of the bottom of the panel to hold it in place. the hole should be slightly larger than the shaft of the fastener.
- Install the panel and place a fastener through the pre-drilled hole.
- Continue to secure the panel by placing fasteners along the cut edge of the panel at 8”-12” intervals. The fastener head will hold the panel back. do not fasten tightly and **do NOT place the fasteners through the panel** (Fig. 9).


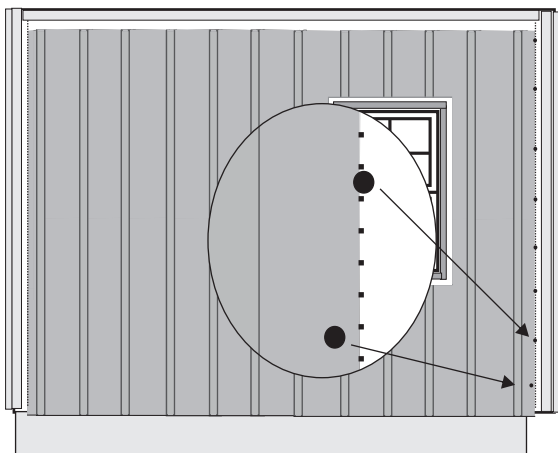


Fig. 9


## TRIM INSTALLATION

- Install trim over furring strips (Fig. 10-11). It is easiest to assemble window and door trims before applying them to the wall. When using Celest trim, be sure to build the trim slightly larger ( $1/8"$  each side) than the window or door to give the finished frame room to expand and contract through temperature changes.
- Cortex® or Pro Plug® screws and matching plugs should be used when installing Celest trim. Space the fasteners no more than 16" apart and no closer than 2" from the end of the trim. Make sure not to fasten through the siding or into the expansion pocket (Fig 11).

*Note: See trim assembly section for more.*

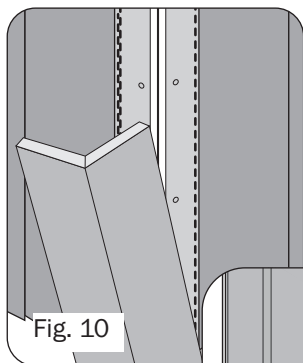


Cortex® Hidden Fastening System

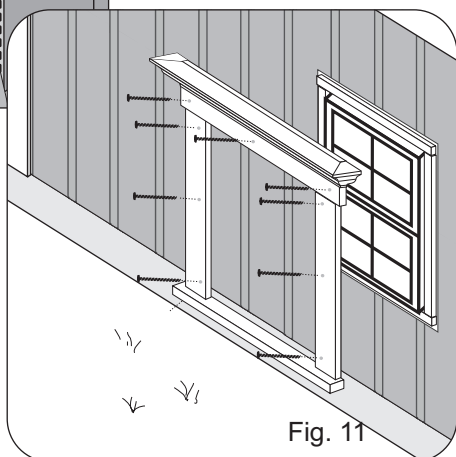

# CELECT SHAKE INSTALLATION


## INSTALLATION SEQUENCE

- 1 Weather Barrier & Flashings
- 2 Furring strips for trim
- 3 Inside Corner Posts
- 4 Starter Strip for Panels
- 5 Celect Siding Panels
- 6 Window, Door, Etc. Trim

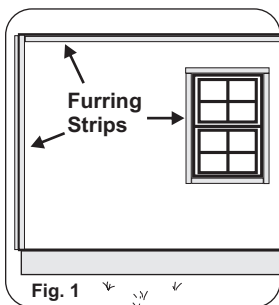


- After preparing the walls for the siding installation (see *Wall Preparation pg. 1*), install 1X2 furring around all windows, doors, outside corners, etc. This must be done anywhere the ends of the siding will be terminated (Fig 1-2).
- Make sure to install the proper flashing as required by specific local building codes (Fig 2)

NOTE: if the furring strips will be completely hidden by the trim, treated 1X2 furring can be used in place of PVC strips. Secure the furring every 8" - 12".

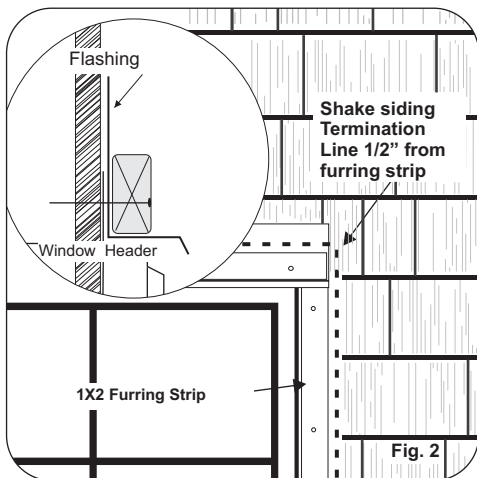



## STARTER STRIP & WORKING OVER OBSTACLES

- Strike a chalk line 4" above the point you wish the bottom of the panel(s) to sit.
- Install starter strip aligning the top of the strip with the chalk line and fastening every 8"-12" (Fig. 3).

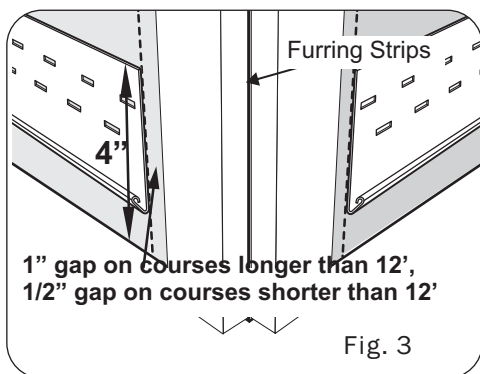

- In certain situations, it may be necessary to remove a bottom section from of the panels to accommodate variations in the first course such as porch floors, etc. In these situations, where the bottom lock is removed, the cut edge of the panel(s) must be covered by trim. Select Finish Trim can be used (Fig 4) or Custom trim can be fabricated with aluminum trim sheet. If trim sheet is used, keep in mind that the face of the channel or trim only needs be wide enough to cover the cut edge of the panel by 1/2" (Fig 5).

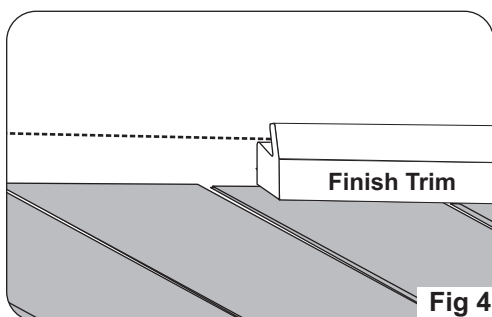


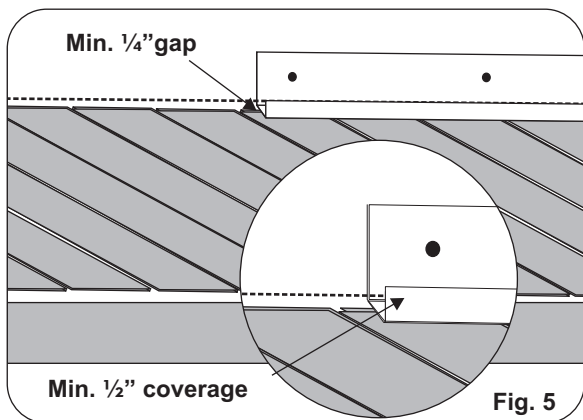

## INSIDE CORNER POSTS

Inside corner posts are the only finish “trim” piece to be installed prior to the siding panels.

- Install any inside corners. Fasten the inside corners using weather resistant screws placed inside the pocket of the corner no more than 16" apart. Unlike the other finished trim, inside corners are applied before the siding.

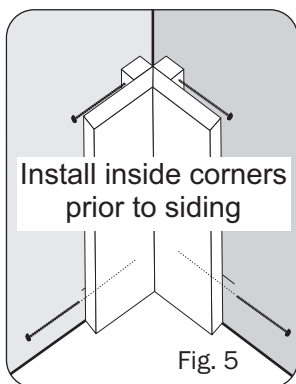


**NOTE:** Make sure not to draw the pocket in when fastening to the wall. The pocket width must remain 3/4". Use a scrap piece of siding as a spacer in the pocket. The inside of the corner post should not lay against the siding.




## INSTALLING PANELS


- Panels install left to right.
- Install the first panel locking it down onto the starter strip and keeping the left end of the panel  $\frac{3}{8}$ " away from the furring strip.
- Fasten the panels by placing fasteners in the nailing flange; one in the center of the panel and two on either side, evenly placed. Keep fasteners approximately 2" in from both ends. (Fig. 6).

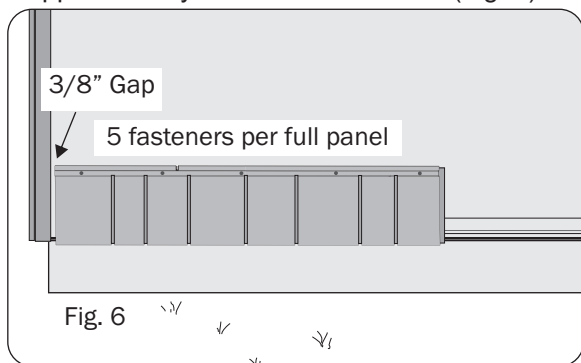

- Install the remainder of the course overlapping the seams and leaving the necessary space between the shakes. If the temperature is above  $70^{\circ}\text{F}$  leave  $\frac{1}{8}$ ", if the temperature is below  $70^{\circ}\text{F}$  leave  $\frac{1}{4}$ " (Fig. 8)

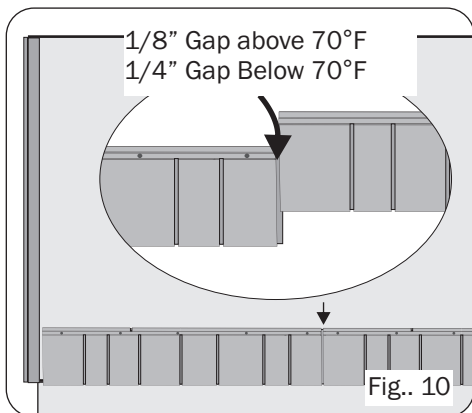


- Measure for the starting panel of the second and remaining courses by measuring from the closest indexing mark to the corner (Fig. 9)
- Measure and cut the panel so the right end of the panel will align with the indexing mark.
- Fasten and complete the courses.

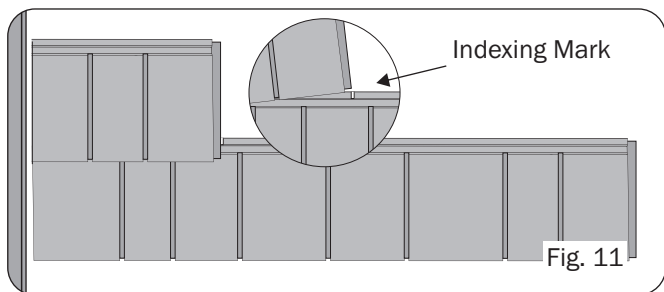

## GABLES


- The same 3/8" gap should be left in gable areas or anywhere the ends of the panels terminate (Fig.7). Either Trim Board, Finish Trim or Gable Trim (Fig. 8.9) can be used.

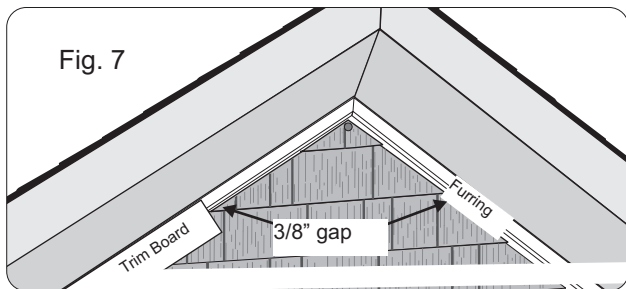

## USING GABLE TRIM


The gable trim is a suitable alternative to a standard trim board if a small profile is desired.

- Measure from the soffit 1 1/2" and strike a chalk line.
- Install the panels aligning the ends with the line leaving the 1 1/2" gap for panel expansion and contraction.
- Install the gable trim using Cortex or Pro Plug screws and matching plugs. Place fasteners approximately every 12"-16" being careful not to place them in the expansion gap.

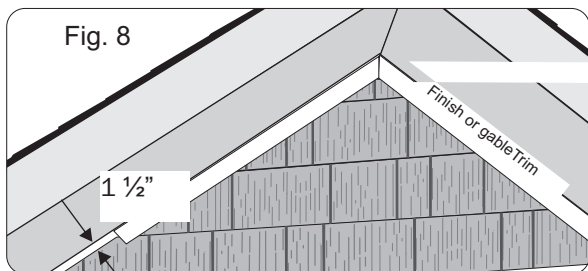


## CUTTING MITERS ON GABLE TRIM

The multiple angles designed into the finish trim and the gable trim allow for the adjustment of the pocket width desired depending upon the application. However, if the installation includes mitering two adjacent pieces of trim together such as at the peak of a gable, it is important that the trim be placed correctly when cutting as shown in figure 9. A scrap piece of 3/4" thick material can be used as a guide to making placement easier.

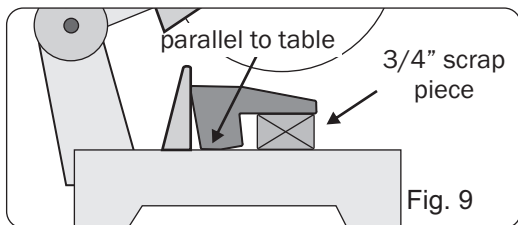


## FIXTURE MOUNTS

- Select fixture mounts are available for obstructions such as lighting, dryer vents, water faucets, etc. Begin by installing the base “ring”. Install the siding panels allowing for the appropriate expansion gap depending upon the length of the siding course. Center and secure the face plate with two Celect Cortex trim screws and plugs (Fig 10)
- Fixture mounts can also be field constructed using Cellular PVC, wood, etc. Allow for the appropriate  $\frac{3}{8}$ " expansion gap.

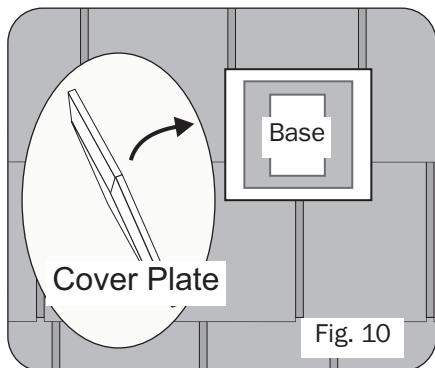



## ROOF LINES

- When working up over roof lines, hold the shake panels off the roof line a minimum of  $\frac{1}{2}$ ". No additional trim is needed. (Fig. 11)

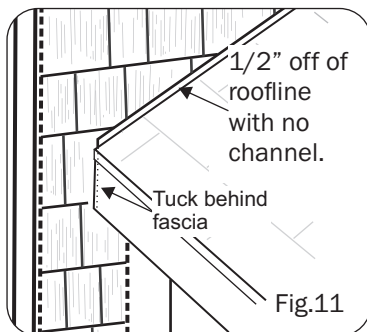

## TOP COURSE INSTALLATION

- Depending upon the trim you choose to you use to finish the top of the wall, measure and cut the top course panel to fit. A freeze board, finish or gable trim can be applied to cover the fasteners a give a finished appearance.
- Install the panel securing it by placing nails along the cut edge of the panel approximately every 16". The head of the nails will hold the panel back to the wall and the shaft of the nail will keep the panel from raising and becoming unlocked from the panel below it (Fig 12). Pin each panel in place by placing one nail through the panel itself toward the middle of the panel (Fig 13).

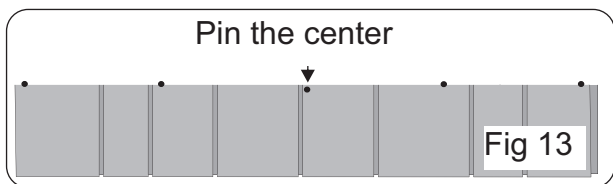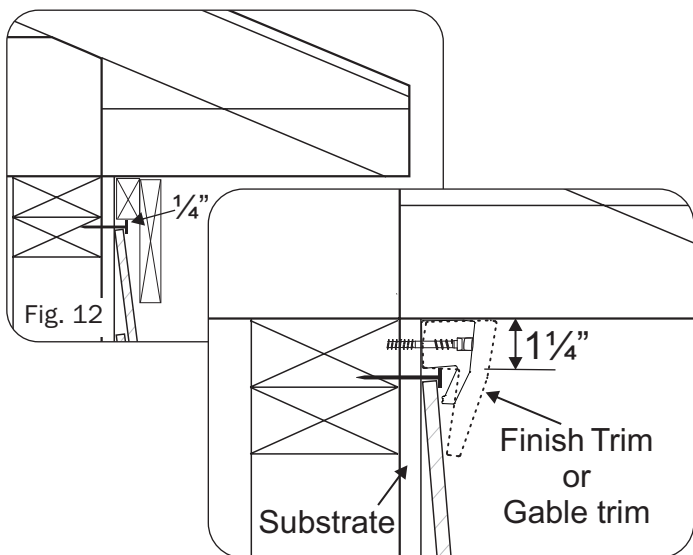

## TRIM INSTALLATION

- Install trim over furring strips (Fig. 13-14). It is easiest to assemble window and door trims before applying them to the wall. When using Celect trim, be sure to build the trim slightly larger ( $1/8"$  each side) than the window or door to give the finished frame room to expand and contract through temperature changes.
- Cortex® or Pro Plug® screws and matching plugs should be used when installing Celect trim. Space the fasteners no more than 16" apart and no closer than 2" from the end of the trim. Make sure not to fasten through the siding or into the expansion pocket (Fig 14).

*Note: See trim assembly section for more.*


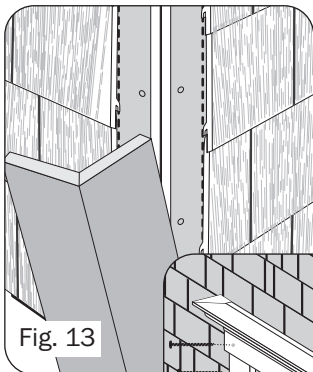


Fig. 13

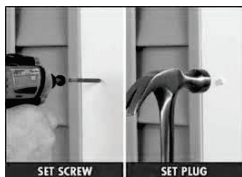

Cortex® Hidden Fastening System



Fig 14

# TRIM ASSEMBLY MODELS



## Fastening

Cortex or Pro Plug screws and matching plugs are recommended to secure Celect Trim

| Skirt Board Width | Fasteners/width 16" O.C. Max |
|-------------------|------------------------------|
| 4"                | 1                            |
| 6" - 8"           | 2                            |
| 10" - 12"         | 3                            |

## Water Table & Skirt Board

- Make sure that the wall is made weather resistant consistent with building codes. If no wrap is used, flash a minimum of 10" up from the bottom, hanging the flashing at least 1/4" over the bottom of the sill plate.
- Install the water table as shown below using weather resistant screws at 8-12" intervals.
- Install flashing at seams as shown.

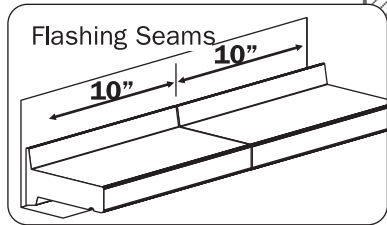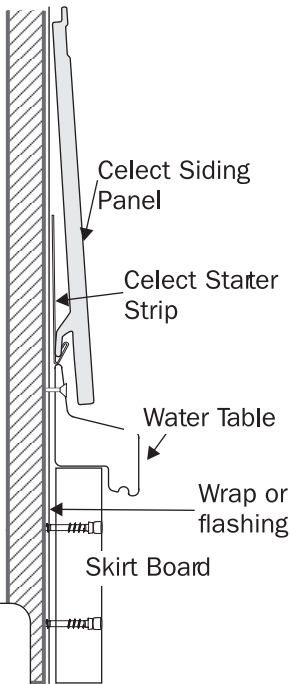


# TRIM BOARD/FASCIA JOINTS

When joining boards in areas such as under eaves or on fascia, a shiplap joint is recommended with the exception of at corners; a mitered corner will give the best appearance.

## Miters


When mitering a corner, the following rules apply:

- The trim board with a mitered end should be no longer than 4'
- Always glue the ends of the boards with PVC cement.
- Place a fastener 2" from the seam on both sides.

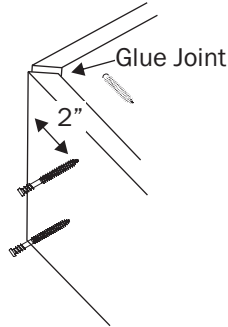


## Managing expansion/contraction on longer runs

Less than 12' glued both ends

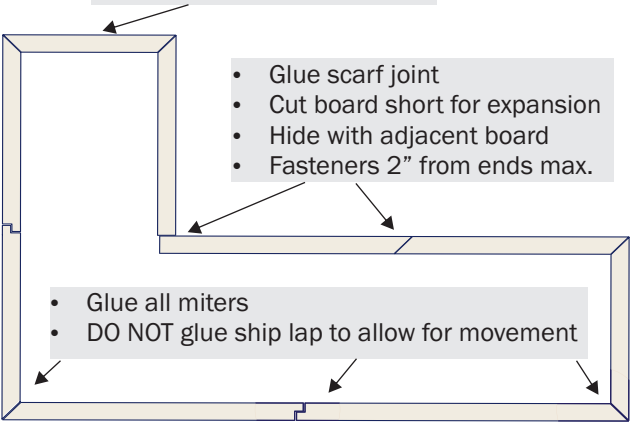



Place a fastener 2" from the seam on both sides.

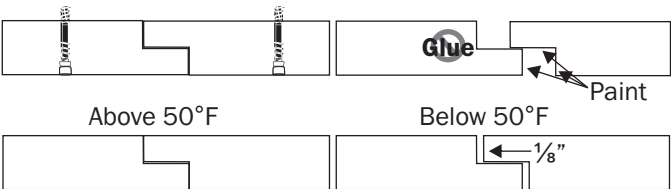



## Select Finish Trim


Select Finish Trim can be used to cover the cut edges of panels along horizontal cuts or where expansion and contraction of the panel(s) is not a concern. Leave  $\frac{1}{4}$ " gap between the edge of the panel and the trim. Secure the finish trim with Cortex® or Pro Plug® screws and matching plugs approximately every 12"-16".

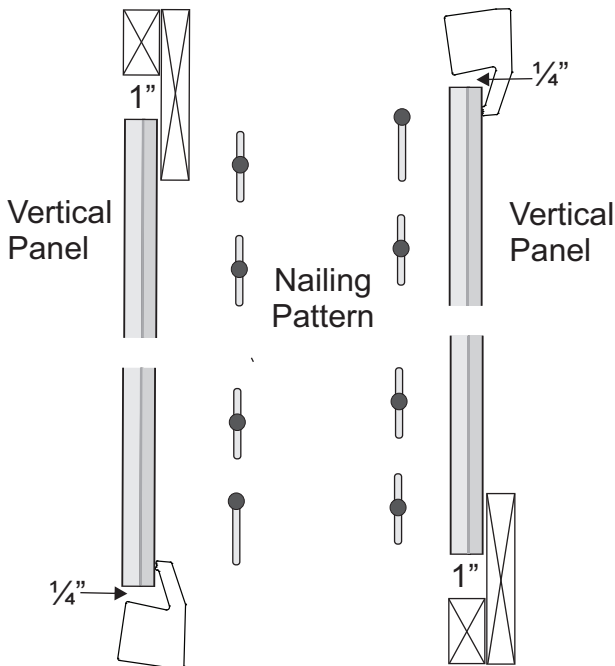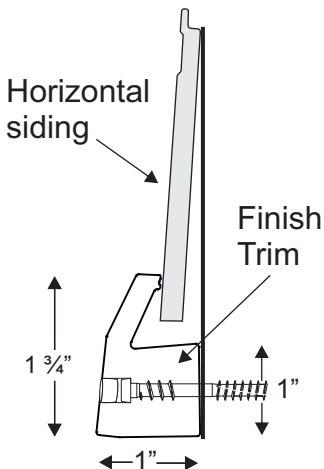

## GABLE TRIM


The gable trim is a suitable alternative to a standard trim board if a small profile is desired.

- Measure from the soffit 1 1/2" and strike a chalk line.
- Install the panels aligning the ends with the line leaving the 1 1/2" gap for panel expansion and contraction.
- The width of the gable cannot extend beyond 30'. For gables beyond 30', a furring strip and minimum 3 1/2" trim board should be used.
- Install the gable trim using Cortex or Pro Plug screws and matching plugs. Place fasteners approximately every 12"-16" being careful not to place them in the expansion gap.

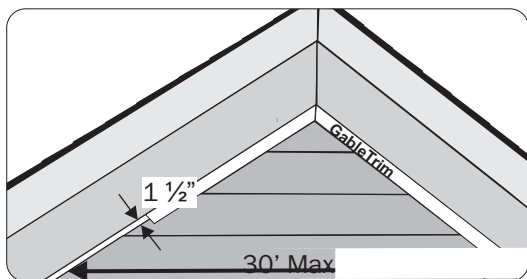

## CUTTING MITERS ON GABLE TRIM

The multiple angles designed into the finish trim and the gable trim allow for the adjustment of the pocket width desired depending upon the application. However, if the installation includes mitering two adjacent pieces of trim together such as at the peak of a gable, it is important that the trim be placed correctly when cutting as shown in figure 9. A scrap piece of 3/4" thick material can be used as a guide to making placement easier.

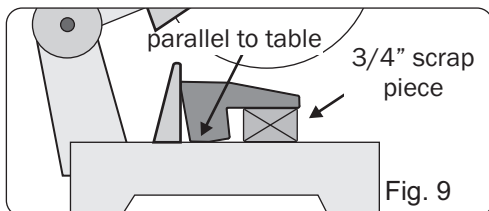

## CLEANING AND MAINTENANCE


- Always test a small area of the wall in an inconspicuous location first, prior to attempting to use any cleaning solution or method to ensure no damage occurs.
- Use a clean soft cotton cloth when necessary, taking care to frequently replace the cloth to avoid scratching the coating finish.
  - For regular general washing mild detergents such as 1/32 diluted TSP (Tri Sodium Phosphate), Dawn, Murphy's Oil Soap, or Vinegar & Water are recommended.
  - For small spot cleaning it is acceptable to use Windex or Isopropyl Alcohol, but avoid scrubbing the same spot repeatedly as this could soften or damage the coating finish.
  - It is recommended to apply any acceptable cleaning solutions to the surface of the siding using a standard pump spray bottle, followed by rinsing the surface of the siding with a garden hose.
  - The finish on Celect is resistant to mildew however, should this occur, standard laundry bleach can be added to the cleaning solution at a ratio of 1 part bleach to 10 parts water (13 ounces per gallon)
- Avoid using solvents such as nail polish remover, acetone, MEK, Butyl Carbitol, etc..., as these chemicals will damage the coating finish.
- Avoid using bleach or cleaners which contain bleach such as Clorox Cleanup, as these cleaners may permanently discolor the coating finish.
- Avoid using any cleaners containing abrasives of any sort such as soft scrub, as these abrasives may scratch the coating finish.
- Avoid using scrub brushes.
- Avoid pressure washing the siding at high pressure as this may damage the siding and or coating finish.

## REPLACING A DAMAGED PANEL


Using a circular saw, set the depth of the blade deep enough to cut just through the face of the damaged panel but not through the wall sheathing.

- cut a 1" strip along the length of the panel just under the panel above. (Fig. 1)

IMPORTANT: Stop approximately 1" from both ends at the seams.

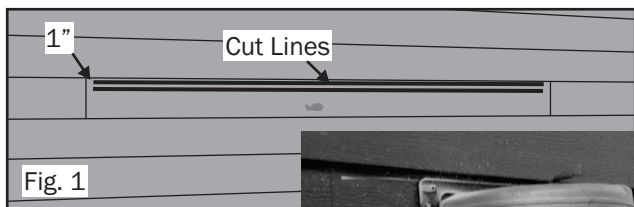


- Finish the cuts at the seams using a utility knife being careful not to cut into or damage the adjacent panel(s). On a right end seam, you will need to use a flat blade screw driver or narrow chisel to finish the cuts behind the seam. (Fig 2)

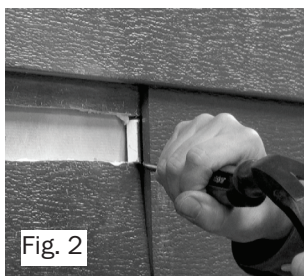


- Remove both the 1" strip and the remaining bottom section of the panel.
- Next remove the top portion or nailing hem portion of the damaged panel. To achieve this, You'll need to cut the fasteners holding the piece. An oscillating tool, reciprocating saw or a hack saw blade can be used.

- Install Select panel replacement clips by inserting the locking tab end of the clip into the gravity lock on the panel above the one you removed. Nail the clip to the wall. Place clips at a minimum of 16" apart. This will secure the bottom of the panel. (Fig. 3)

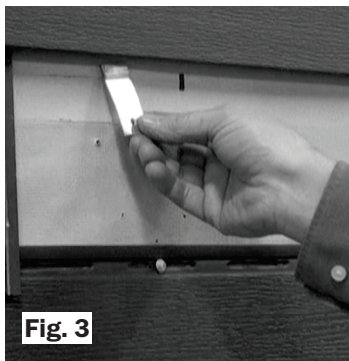


**Fig. 3**

- Locate a new panel that is as close to the length of the damaged panel as possible. You may have to adjust the adjacent panel(s) slightly to achieve a necessary measurement.
- Remove the nailing hem of the replacement panel using a utility knife cutting along the indentation just below the nailing slots.

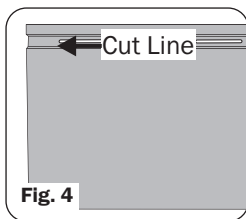

**Fig. 4**

- If the panel will be seamed on the right end, measure up from the bottom of the panel 2" along the seam locking tab. File down the locking tab flush with the rest of the tab with a knife. This will allow for easier installation at this seam.

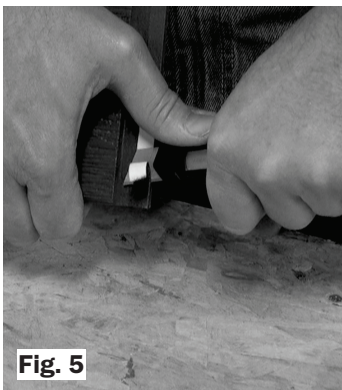

**Fig. 5**

- Begin the installation of the replacement panel installing the bottom right end of the panel behind the adjacent panel first, then lift the rest of the panel into place making certain that the top edge of the panel is sliding under the panel above it.




- Lastly, using only your hands, “smack” the face of the replacement panel in a downward motion lowering the panel over the nailing hem of the panel below it until the lock is fully engaged.



# TYPICAL WINDOW PROFILE ILLUSTRATIONS


## Picture Framing

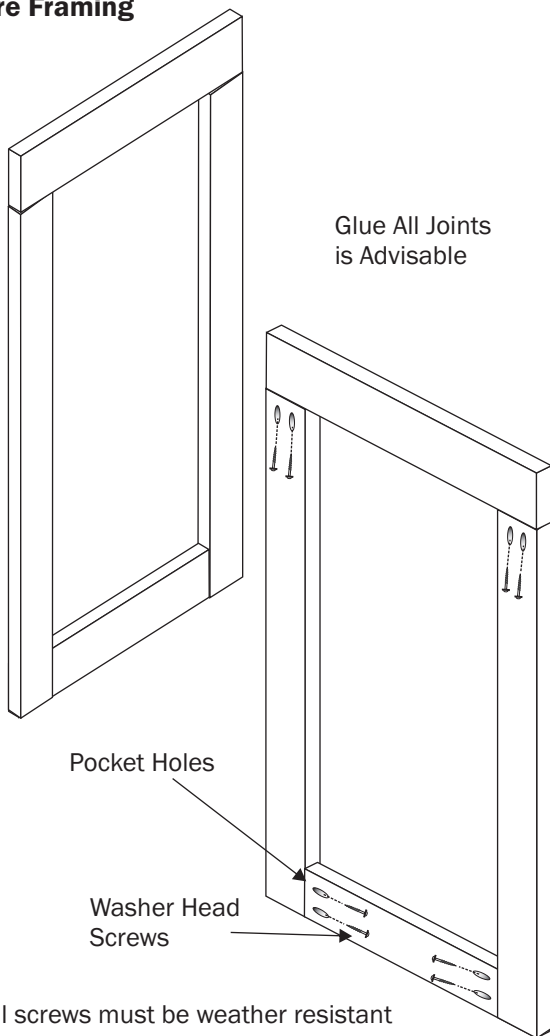

NOTE: All screws must be weather resistant

# TYPICAL WINDOW PROFILE ILLUSTRATIONS


## Adding Rams Crown and Sill Nose

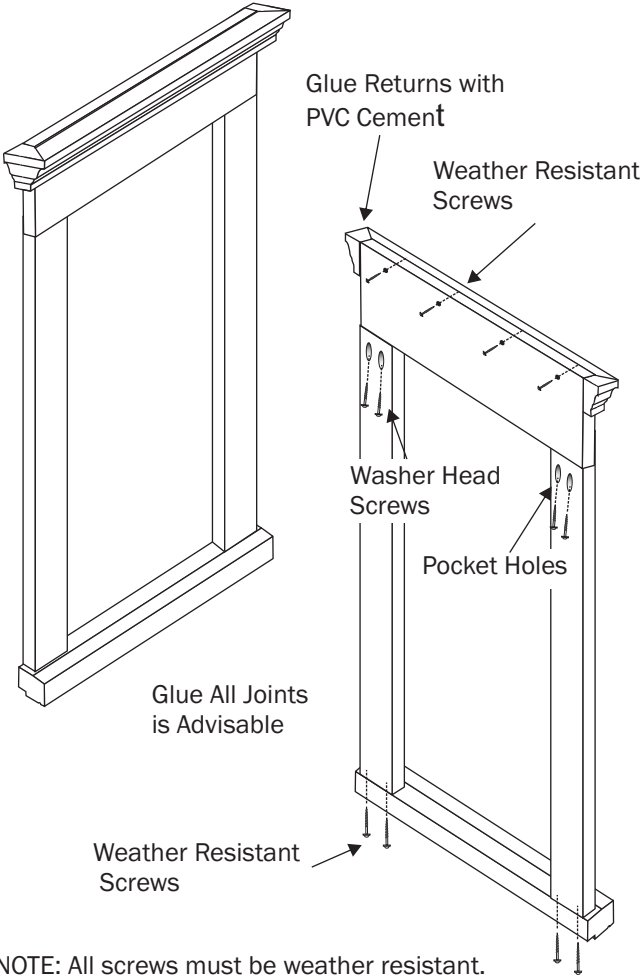





## Installing an Apron

- Begin by fastening the apron to the jamb trim. (It is typical to use a wider board for the apron so as to result in a similar apron reveal below the sill nose.)
- Run a bead of PVC cement on apron where sill will be placed.
- Next install the sill nose with screws as shown.

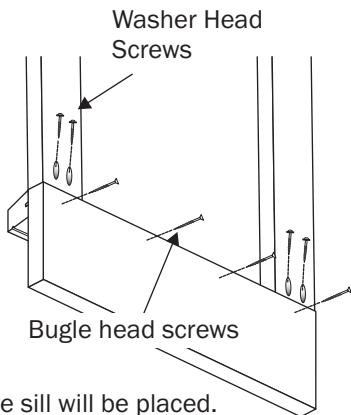

## Celect Brickmould


- Miters should be glued and secured with weather resistant screws as shown below.
- Cortex® or Pro Plug® screws and matching plugs should be used when installing Celect trim. Space the fasteners no more than 16" apart and no closer than 2" from the end of the trim. Make sure not to fasten through the siding or into the expansion pocket

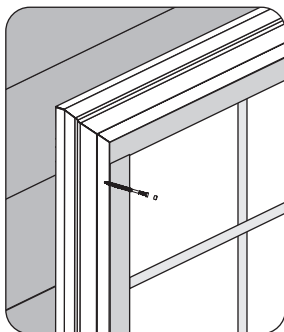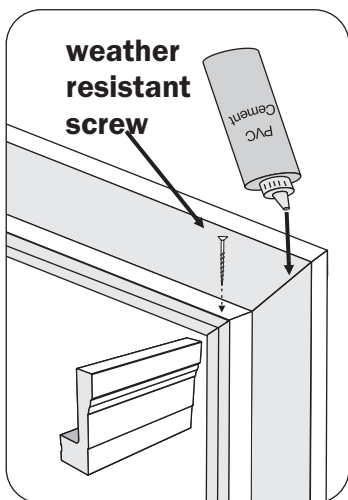

## INSTALLING SHUTTERS

Do not fasten shutters through a course of siding unless the siding panel(s) are either;

- one full panel or less in length such as between two shutters (upper diagram)
- or
- free to expand away from the shutter (lower diagram)

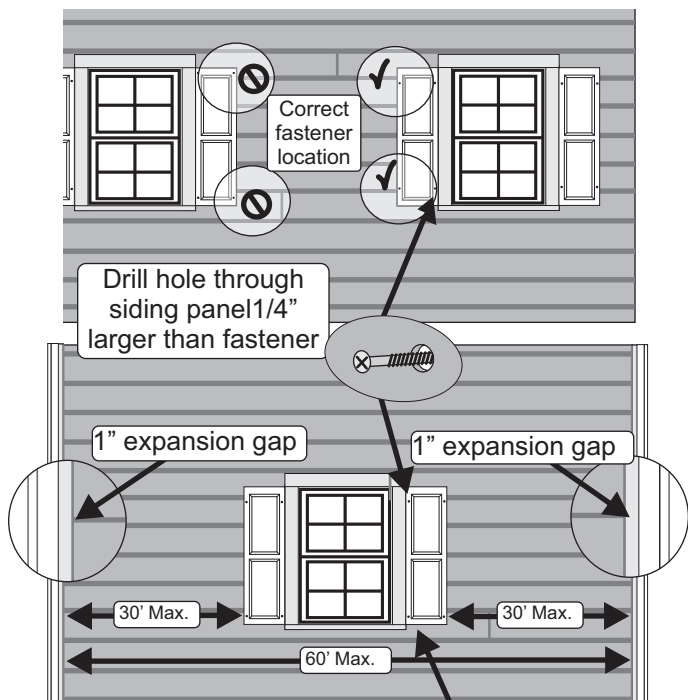

Installing a shutter through a panel effectively “pins” that panel. Therefore, the panel must be able to expand and contract away from that “pin” point. To assure panel movement, center all siding fasteners in the nailing slots in the courses pinned by the shutter fasteners. These courses must have adequate expansion room at the ends (1”) and can be a maximum of 30’ in length.

If the siding course has been center pinned already, the shutter can not be installed.

## FREQUENTLY ASKED QUESTIONS

### **What is the best method for cutting Celect?**

Celect siding panels are most easily cut using standard wood cutting tools such as a miter saw or circular saw for straight cuts and jig saw around obstacles. The best tool for Celect Trim is a power miter saw.

### **Do the cut ends need to be sealed?**

No, not necessarily. The only reason to coat them is if the ends are going to be visible. This way the finish color will match the adjacent sides of the part.

### **Where and when can I use caulking?**

The use of caulking should be held at a minimum. If it is desired for esthetic reasons, caulking can be used around window and door trim, etc.

Never caulk at any expansion gaps such as in trim pockets or at the top of corners.

### **My existing windows have a built in J channel. Do I still need additional trim around the window?**

Typically yes. Celect horizontal profiles require  $\frac{1}{2}$ " to 1" expansion gaps along the jams of windows and most built in channels are only  $\frac{3}{4}$ " deep. This means that the end of the panel could contract to the point that it would be visible outside the pocket of the channel. The same holds true for Celect Board and Batten panels only not at the jambs but above and below windows for the same reason. Unless the built in trim is at least 1" in depth, additional trim should be installed.

## FREQUENTLY ASKED QUESTIONS

### **Can Celect siding and trim be repainted?**

Yes. We recommend 100% acrylic latex paint.

If you're going to paint the product a darker color, consult the paint manufacturer for the LRV (Light Reflectance Value). Painting Celect products with paint darker than 56% on the LRV scale voids the product warranty.

There are paint manufacturers that sell coatings specifically designed for PVC. These paints are typically referred to as "vinyl-safe" paints or "heat reflective" coatings.

## NOTES


## **CONTRACTOR CHECK LISTS**

### **WALL PREPARATION CHECK LIST**

- ☐ Solid, flat, nailable surface (OBS, Plywood, fanfold over solid existing siding)
- ☐ Weather protective barrier (wrap, etc.)
- ☐ Code compliant flashings

### **SUGGESTED TOOL & SUPPLIES CHECK LIST**

- ☐ Miter saw (60-80 tooth blade) with stand or table to support material.
- ☐ Saw gorses or layout table for trim assembly
- ☐ Cordless drill/driver
- ☐ Basic hand tools (hammer, utility knife, tape measure, level, chalk line, square, etc.)
- ☐ Kreg Jig<sup>®</sup> (trim assembly)
- ☐ Circular saw
- ☐ Optional: Jig saw, Router, etc.
- ☐ Cortex<sup>®</sup> or Pro-plug<sup>®</sup> trim screws and Celect plugs
- ☐ Kreg Blue Coat<sup>®</sup> 1¼ course thread ext. screws
- ☐ Kynar<sup>®</sup> touch-up bottles
- ☐ Professional grade PVC Cement
- ☐ Super glue and activator if available
- ☐ Celect fixture mount blocks (as needed)
- ☐ Weather resistant 1½" - 2" nails (roofing)

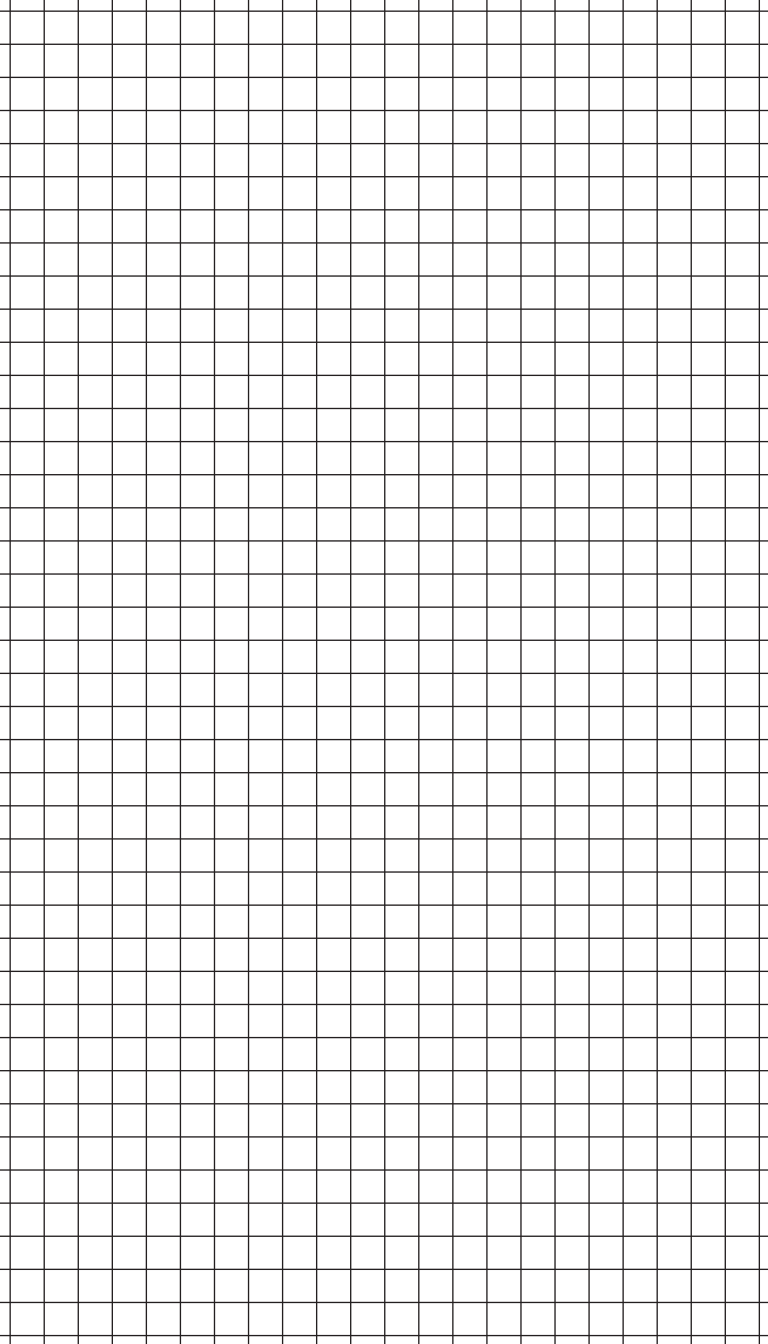





 **ROYAL**® Building Products

91 Royal Group Crescent, Woodbridge, Ontario Canada L4H 1X9  
T 905.850.9700 C 905.850.9184 [royalbuildingproducts.com](http://royalbuildingproducts.com)

**A Westlake Company**

0117